




CANOPY INSTALLATION INSTRUCTIONS

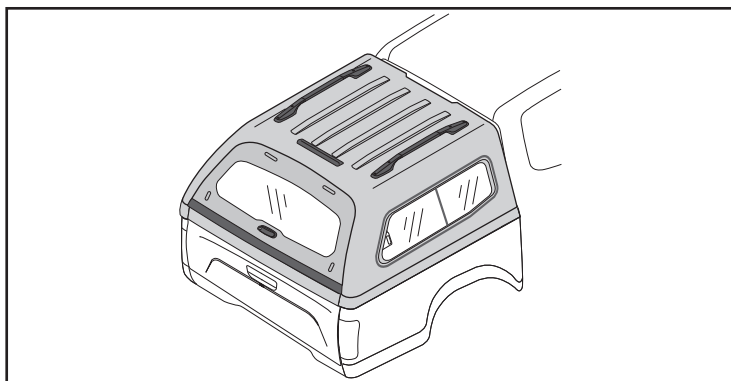

Caution for installation

Read this mounting manual carefully, before your start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.

Product name : MAX TOP S.III
 Model name : ISUZU CREW CAB (RT-50) 2012 →
 Inst. number : L04-0308

Component parts

No.	Part name	Q'ty
1.	Canopy shell set	1 Set
2.	Plate rail lock FB	4 Pcs.
3.	Plate rail lock FL	4 Pcs.
4.	Plate rail lock front	2 Pcs.
5.	Plate support	4 Pcs.
6.	Clamp lock	4 Pcs.
7.	Hex bolt M8x30	2 Pcs.
8.	Hex bolt M8x40	8 Pcs.
9.	Hex nut M8	10 Pcs.
10.	Spring washer M8	18 Pcs.
11.	Plain washer M8x18	16 Pcs.
12.	Plain washer M8x25	2 Pcs.
13.	Plastic cap nut	10 Pcs.
14.	Front harness set	1 Set
15.	Cable tie 24"	5 Pcs.
16.	Cable tie 8"	10 Pcs.
17.	Emblem	2 Pcs.
18.	Battery AAA	4 Pcs.

Tools used









No.12	No. T-40	Silicone dispensing gun			
No.5	No.5,12	Silicone non acid	Methyl alcohol 100%		







Vandapac Co., Ltd.

700/135 Moo 5, Klongtumru, Muang Chonburi, Chonburi 20000 Thailand Tel : (038)468-008 Fax : (038)468-006 Email : mail@vandapac.com





Instruction procedure (without bedliner)

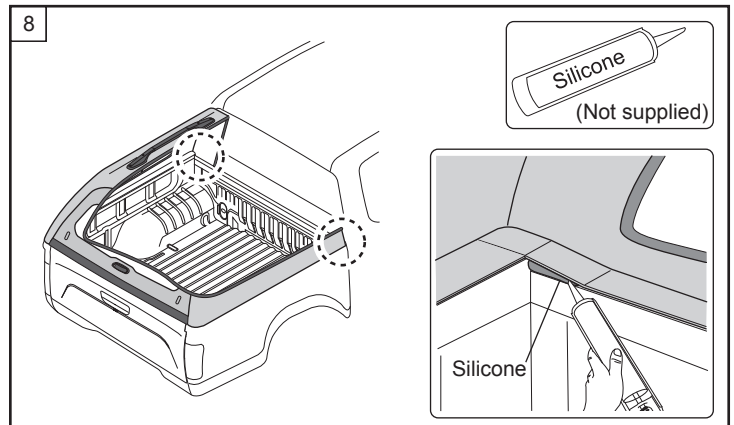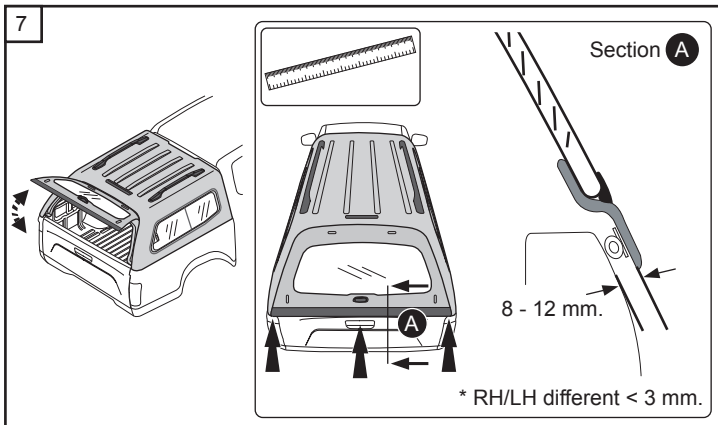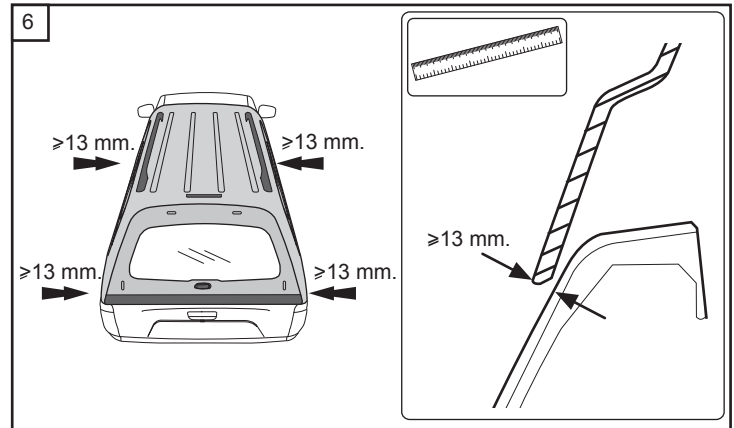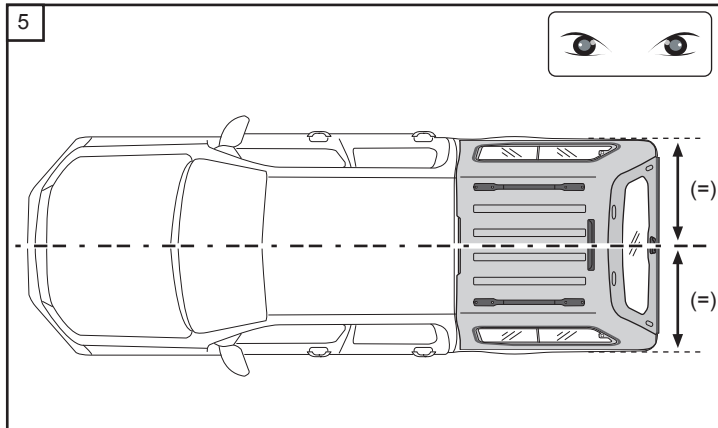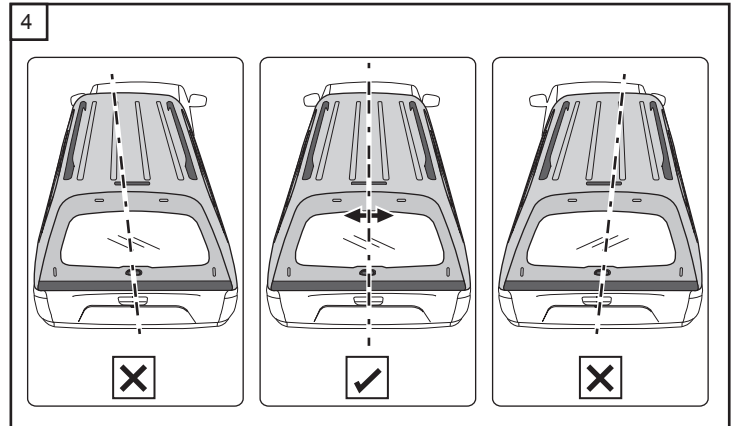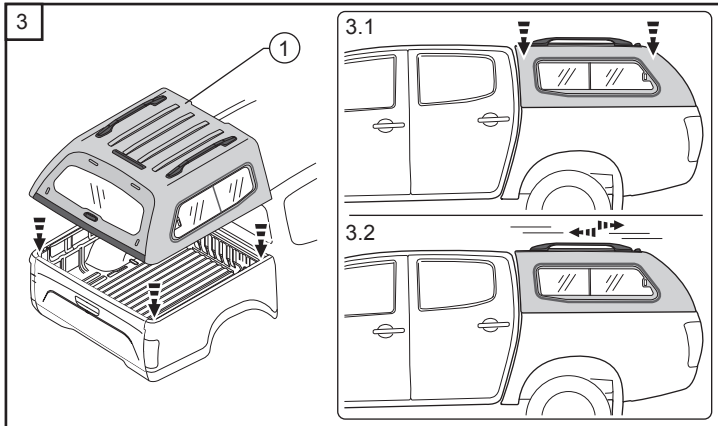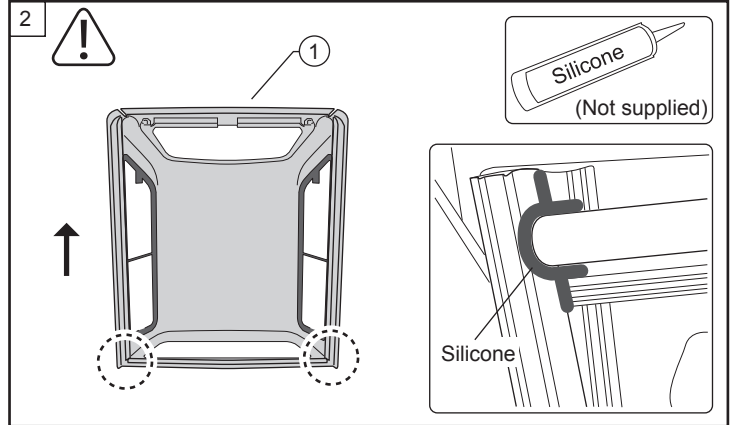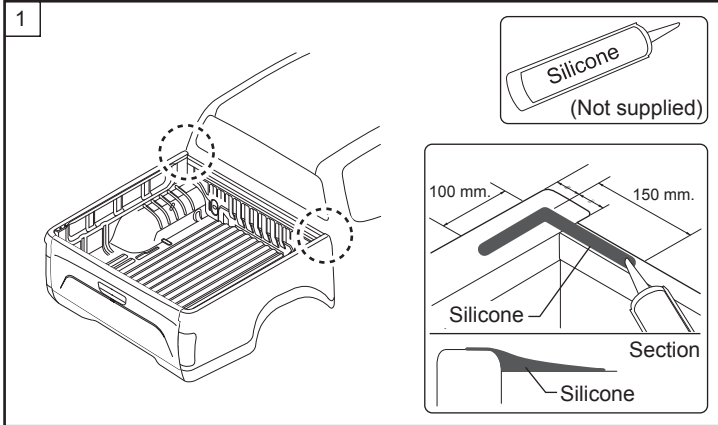









Instruction procedure (without bedliner)

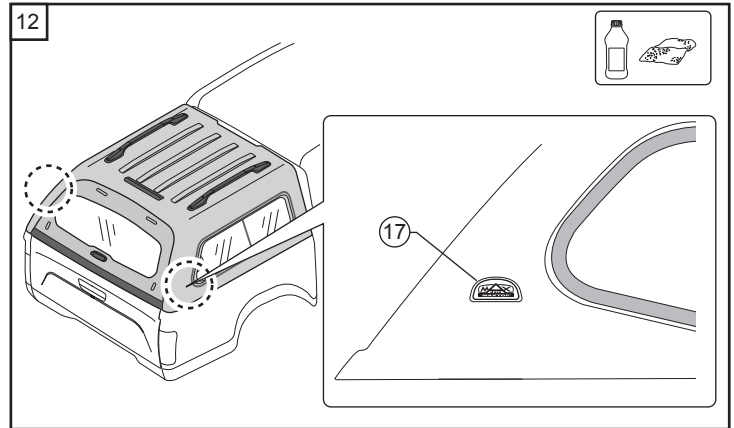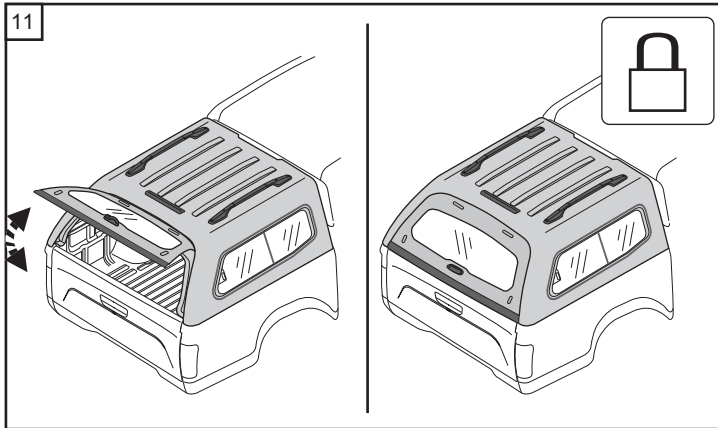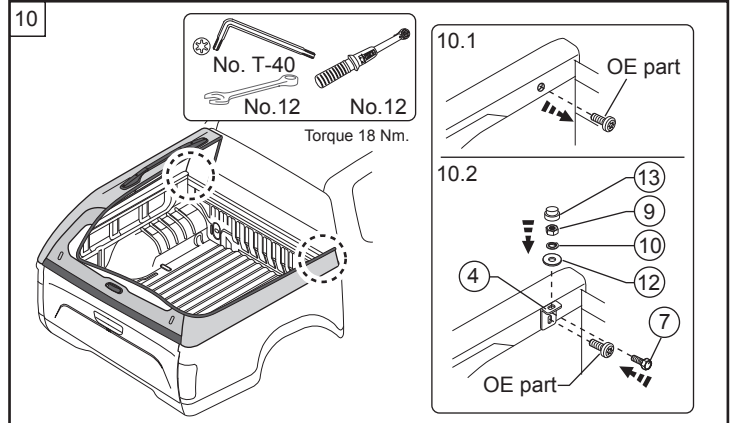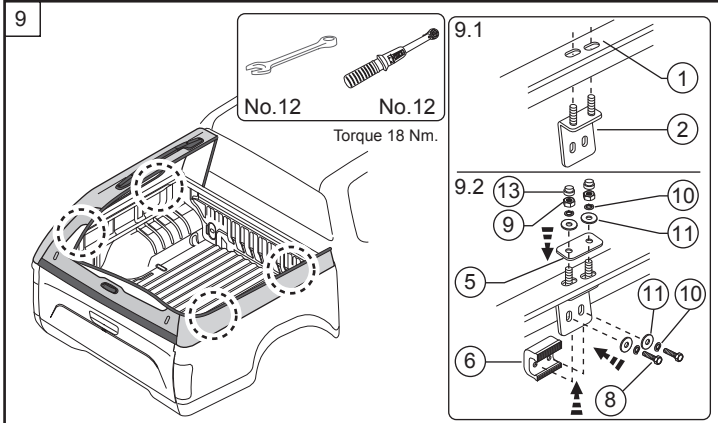




Instruction procedure (with bedliner)

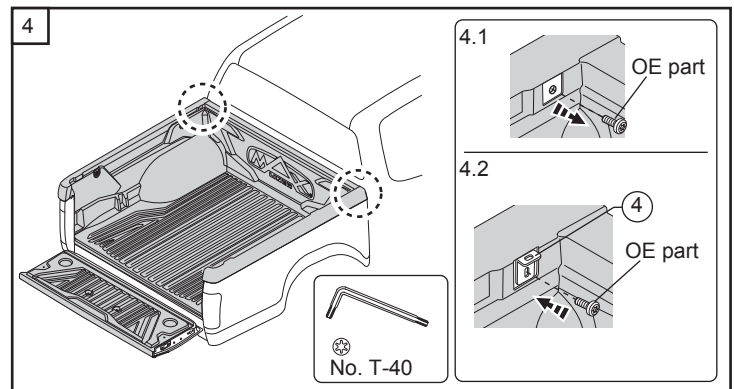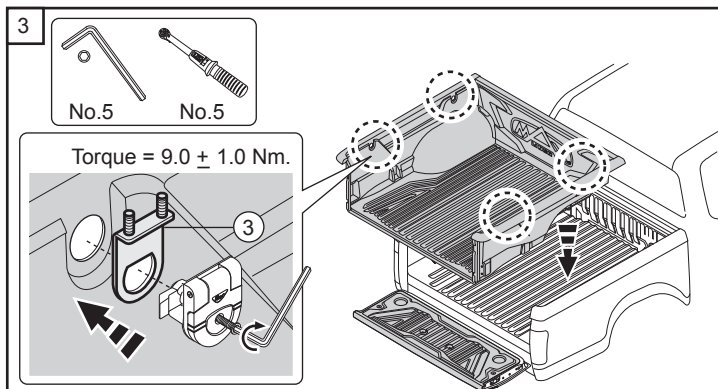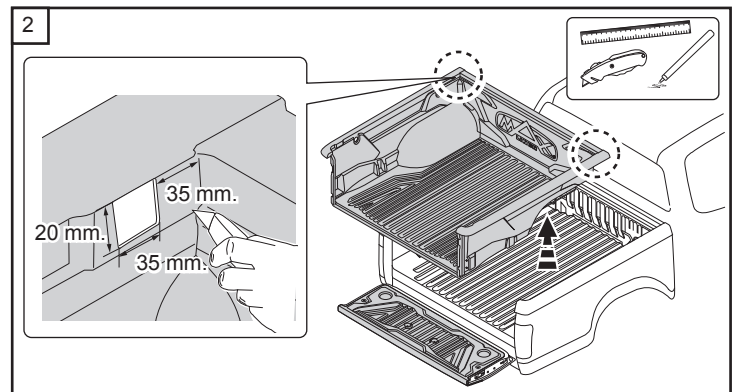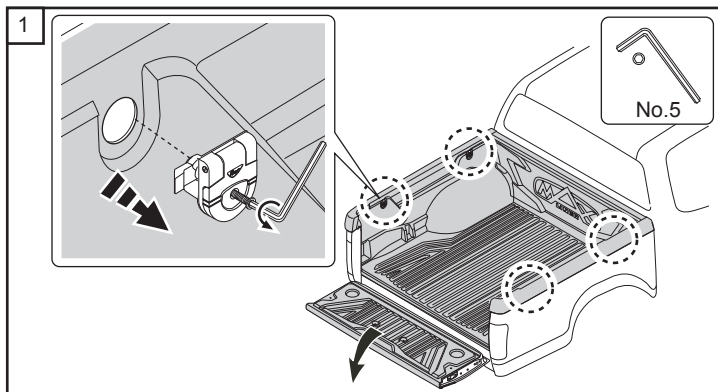


Instruction procedure (with bedliner)

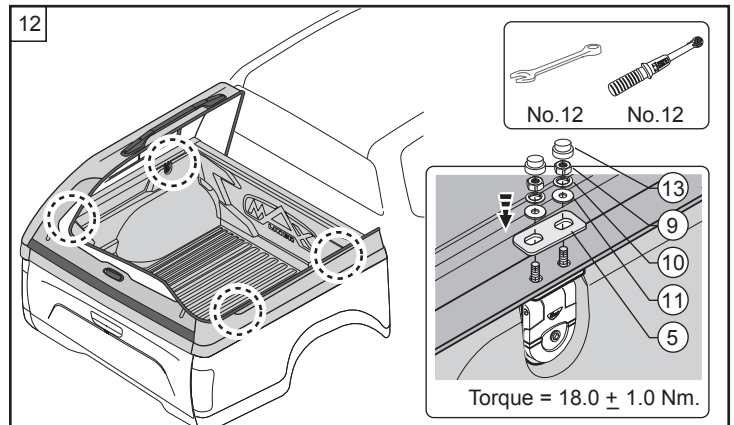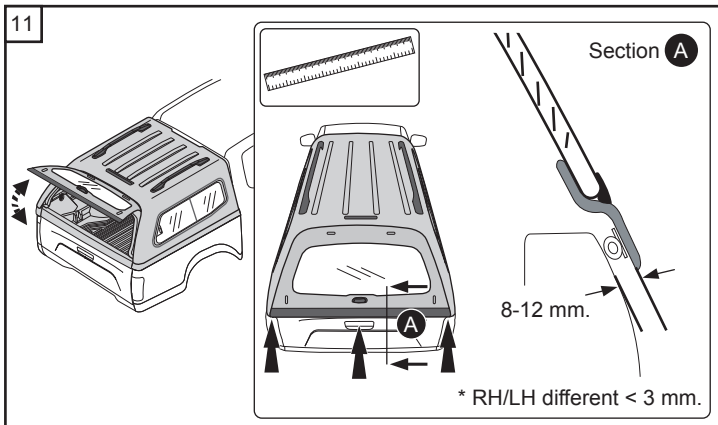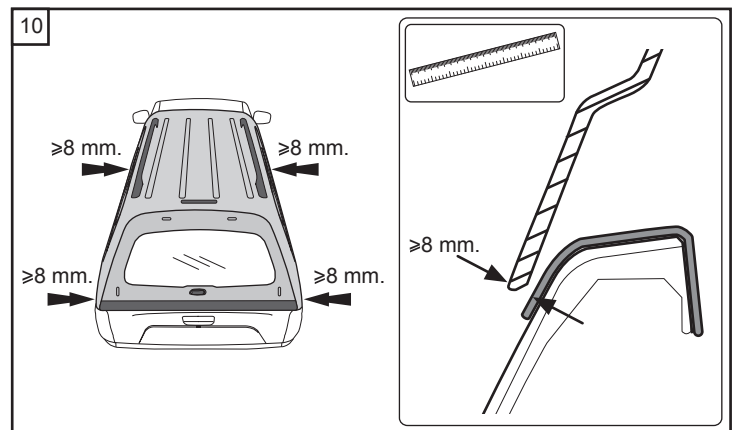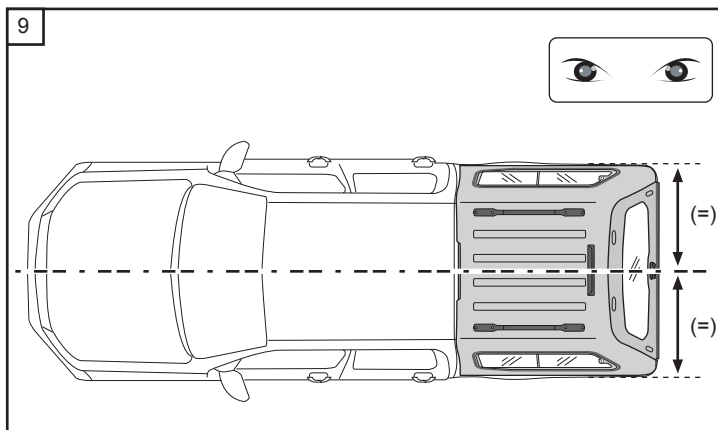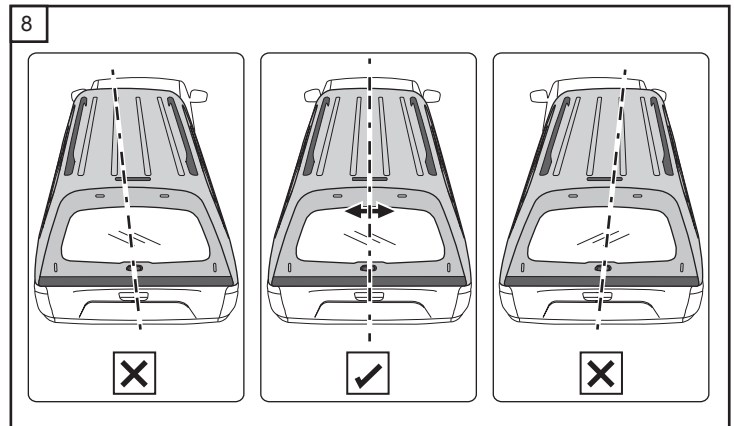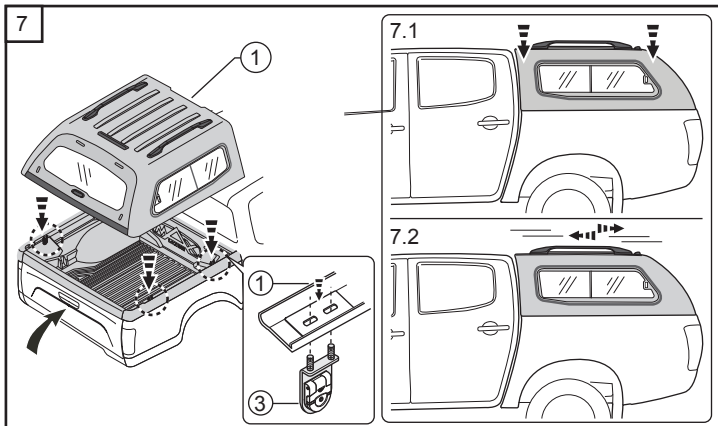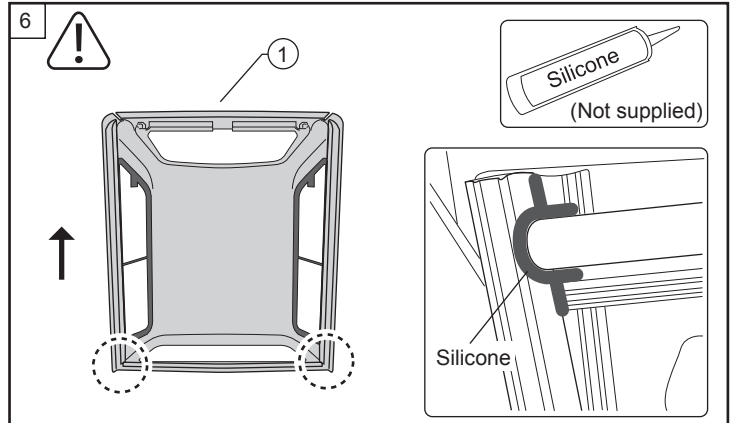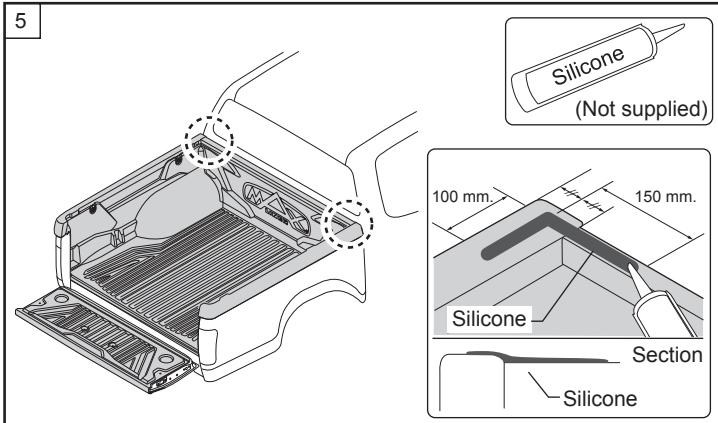


Instruction procedure (with bedliner)

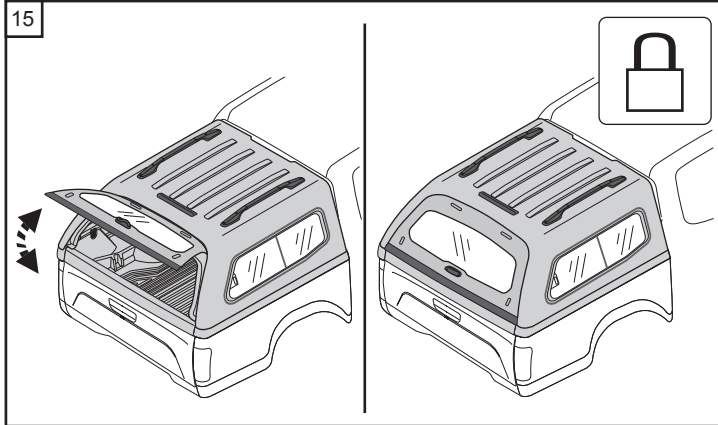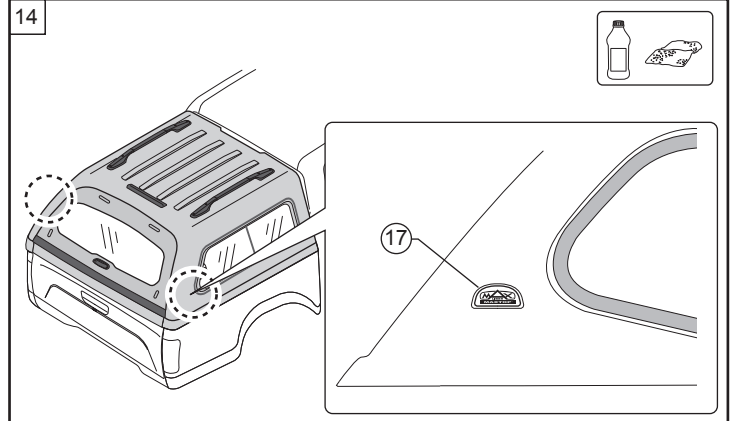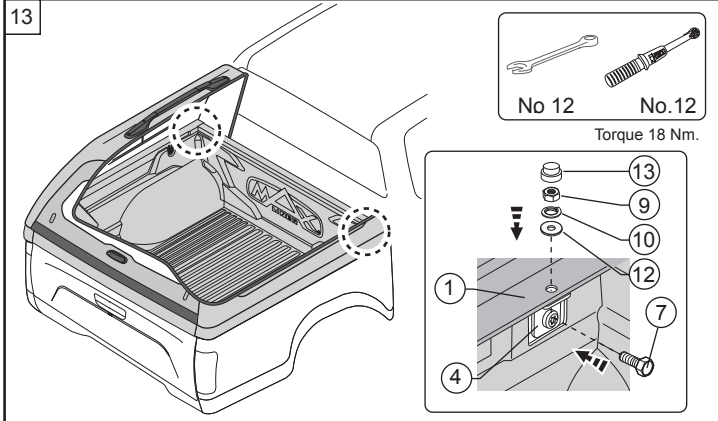

NOTE : ROOM LAMP

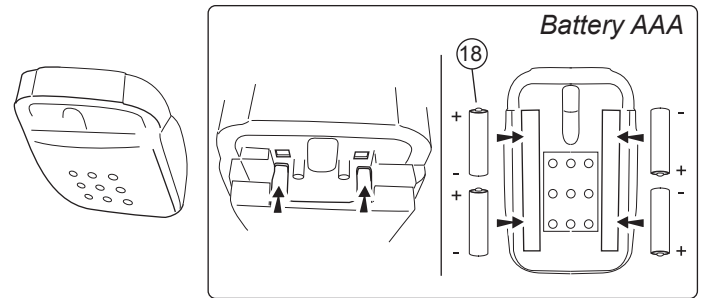

Instruction procedure (Cord set)

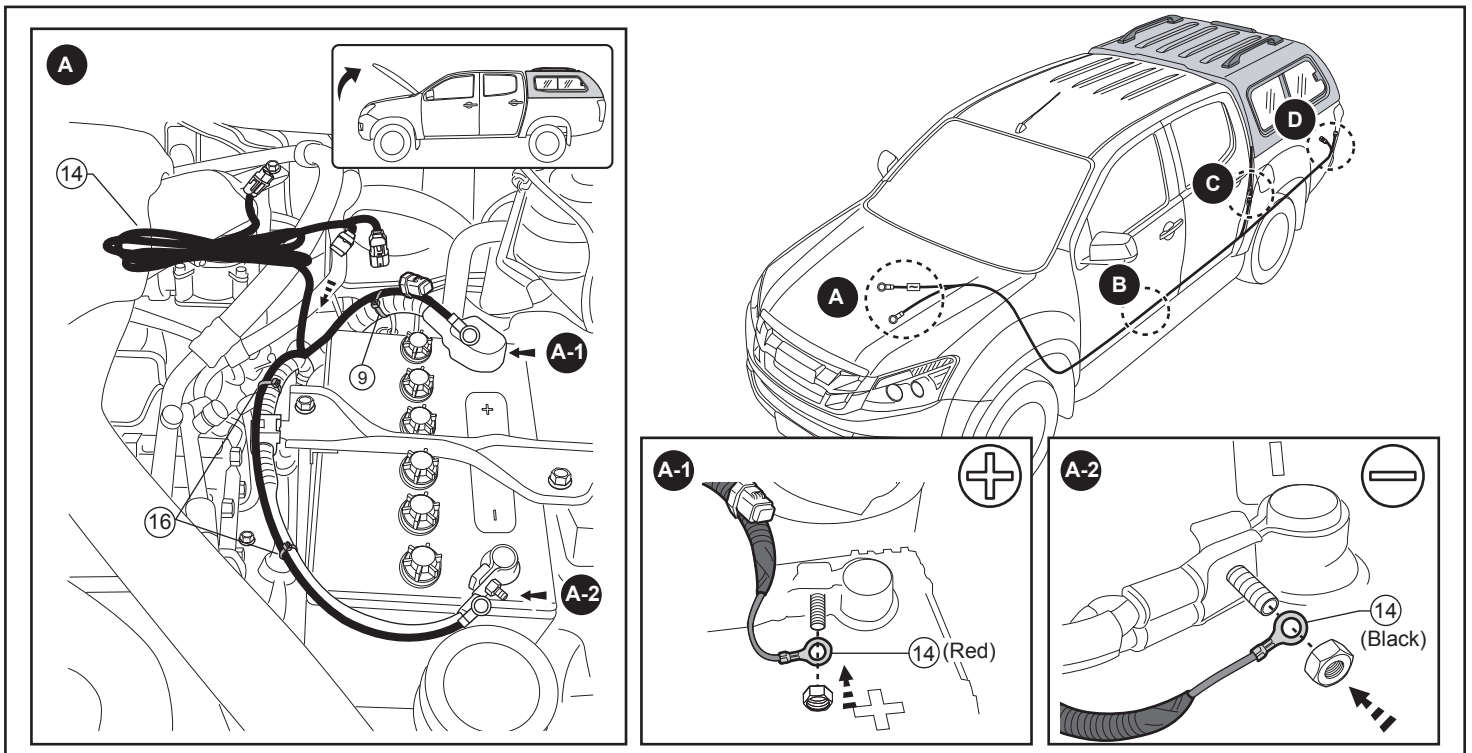

Instruction procedure (Cord set)

