




TONNEAU COVER INSTALLATION INSTRUCTIONS

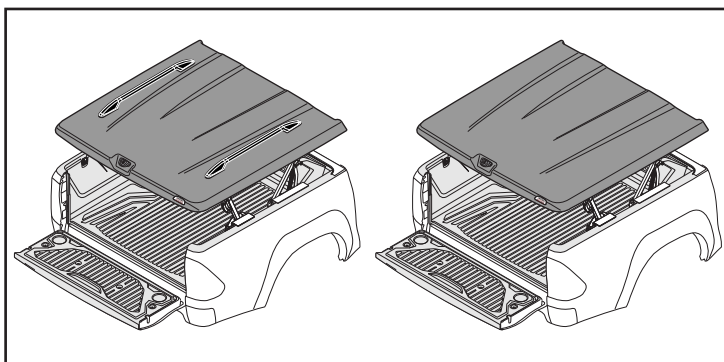

Caution for installation

Read this mounting manual carefully, before your start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.

Product name : MAXCOVER 180° (w, w/o roof rack)


Model name : TOYOTA REVO DBC 2015

Inst. number : L05-0061

Component parts

No.	Part name	Q'ty	No.	Part name	Q'ty
1.	Body maxcover	1 Set	11.	Hex bolt M8x15 mm.	20 Pcs.
2.	Front bracket LH/RH	1 Set	12.	Hex bolt M8x30 mm.	8 Pcs.
3.	Rear bracket LH/RH	1 Set	13.	Hex bolt M8x40 mm.	8 Pcs.
4.	Plate support bracket LH/RH	1 Set	14.	Hex nut M8	24 Pcs.
5.	Inside bar	2 Sets	15.	Spring washer M8	60 Pcs.
6.	Plate front lock LH/RH	1 Set	16.	Plain washer M8 OD=18 mm., t=1.2 mm.	52 Pcs.
7.	Front water defense ABS	1 Pc	17.	Plain washer M8 OD=25 mm., t=2.8 mm.	8 Pcs.
8.	Shock absorber	2 Pcs.	18.	Emblem	1 Pc.
9.	Twin nut M8x35 mm.	20 Pcs.	19.	Primer 4298	2 Pcs.
10.	Clamp lock	8 Pcs.			









Tools used

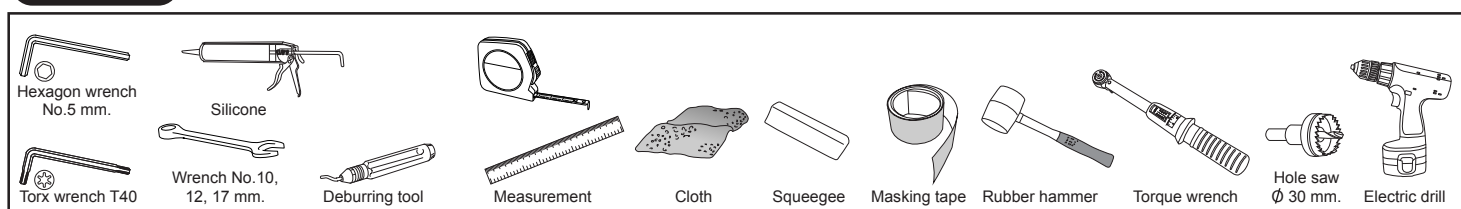









Vandapac Co., Ltd.

700/135 Moo 5, Klongtumru, Muang Chonburi, Chonburi 20000 Thailand Tel : (038)468-008 Fax : (038)468-006 Email : mail@vandapac.com

Instruction procedure (with Bedliner O/R)

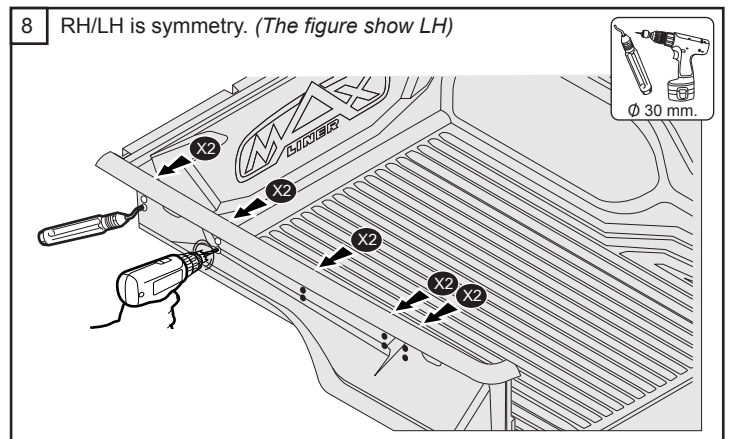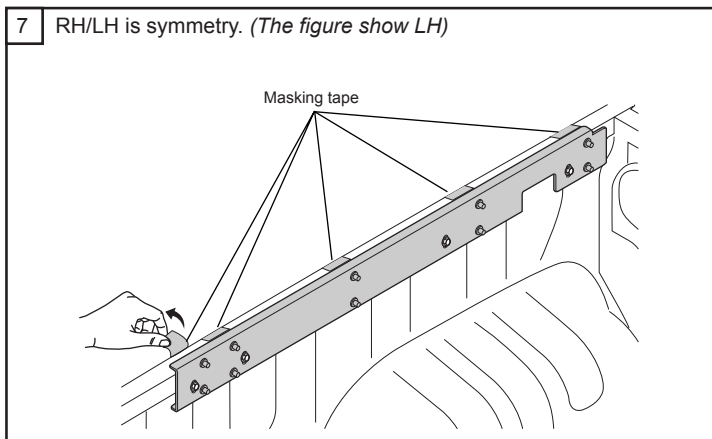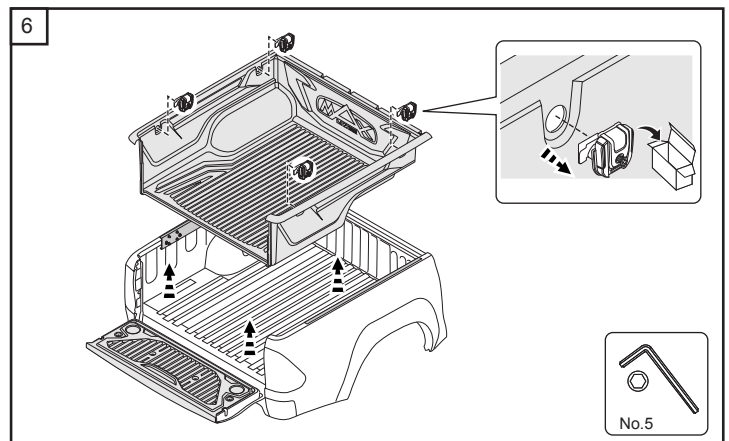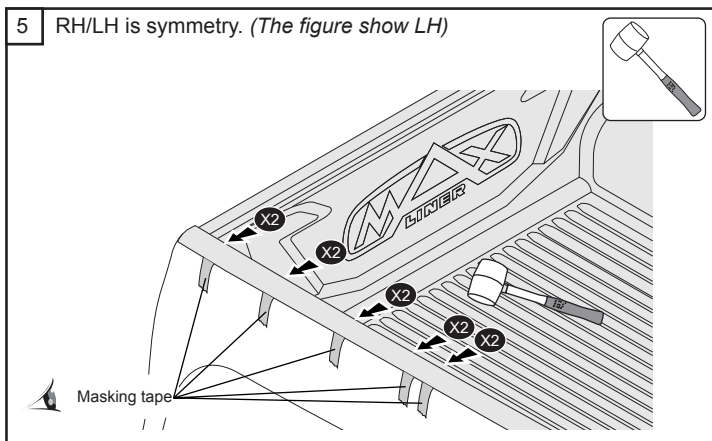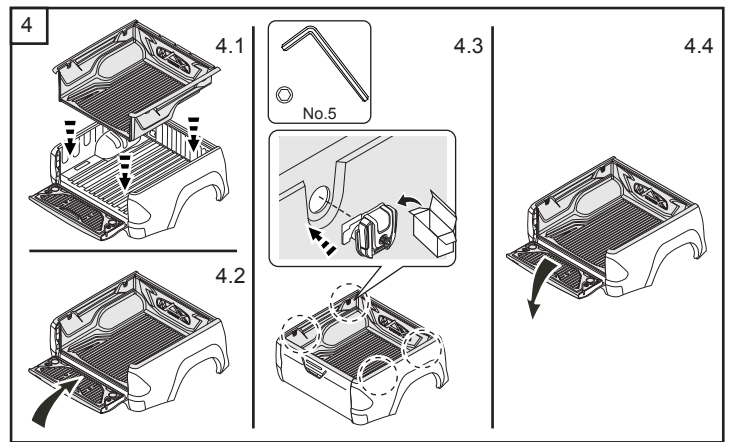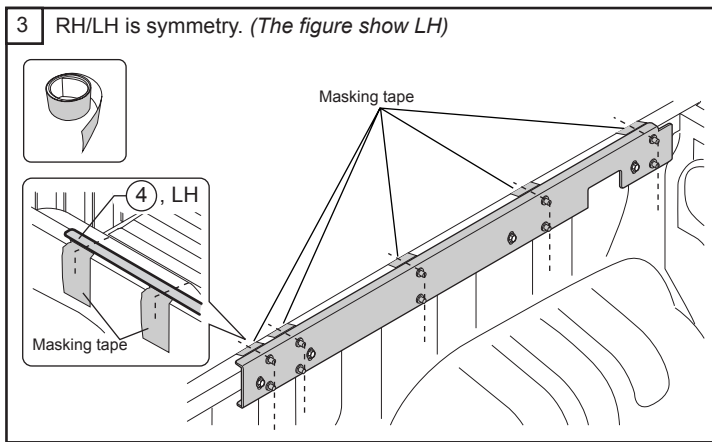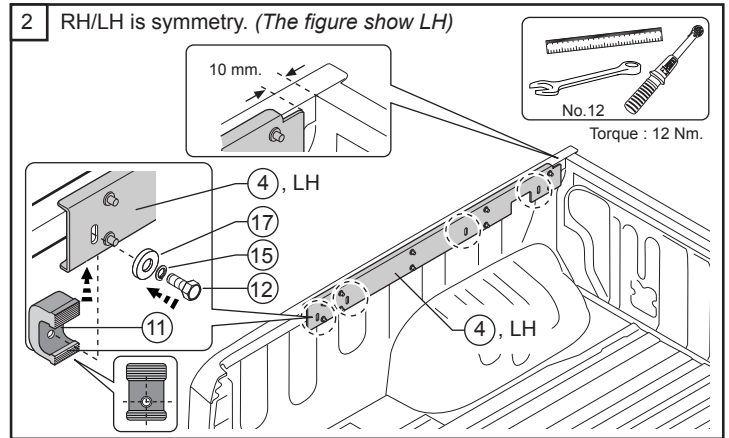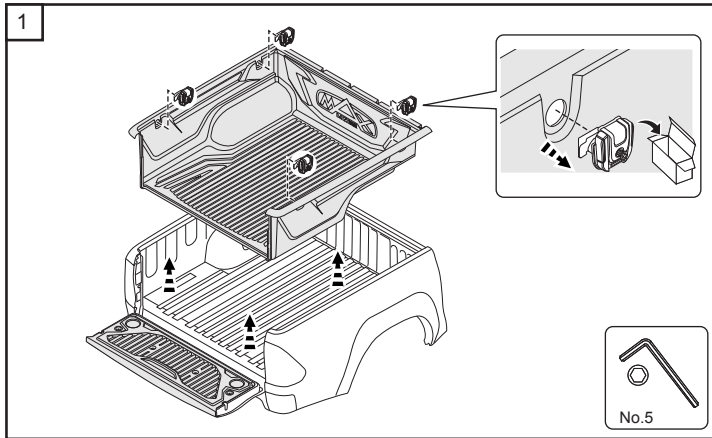


Instruction procedure (with Bedliner O/R)

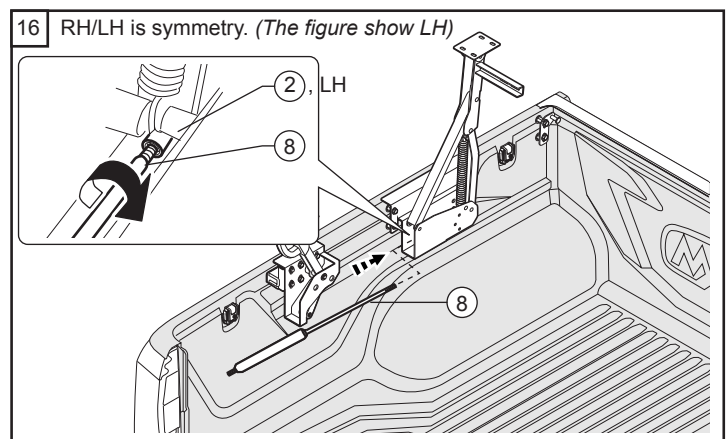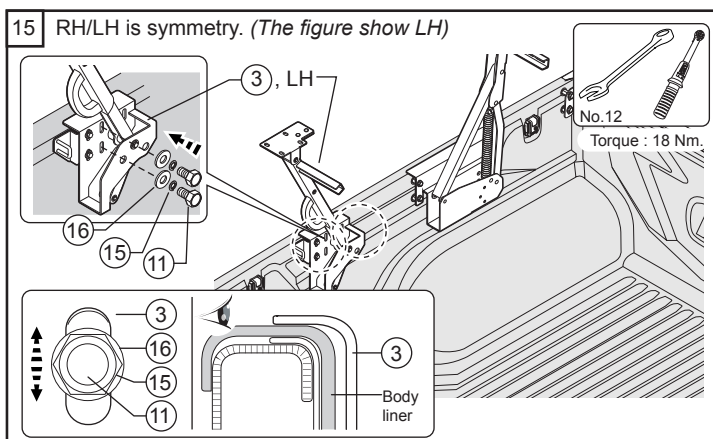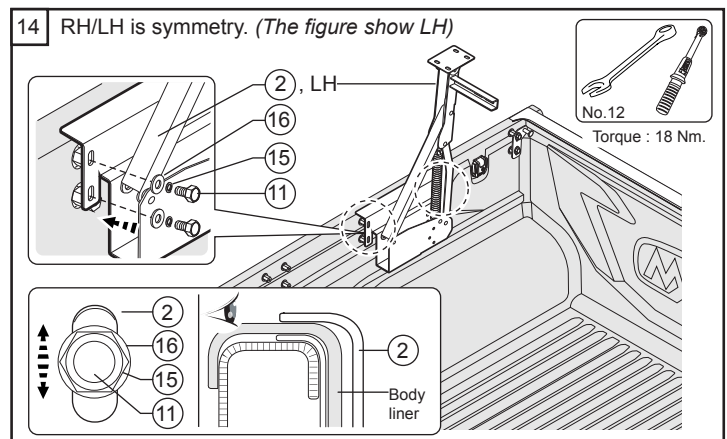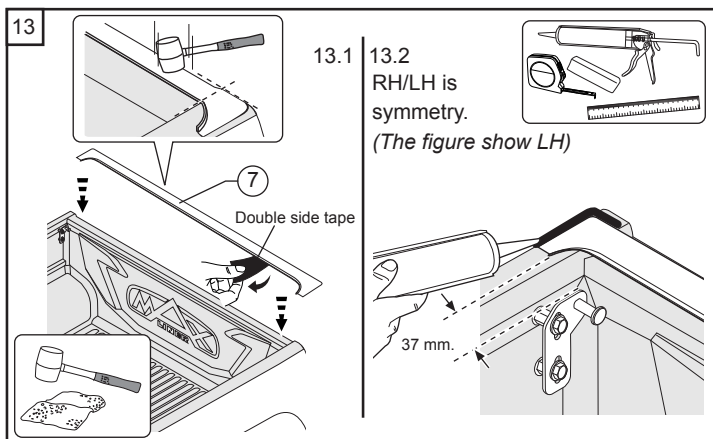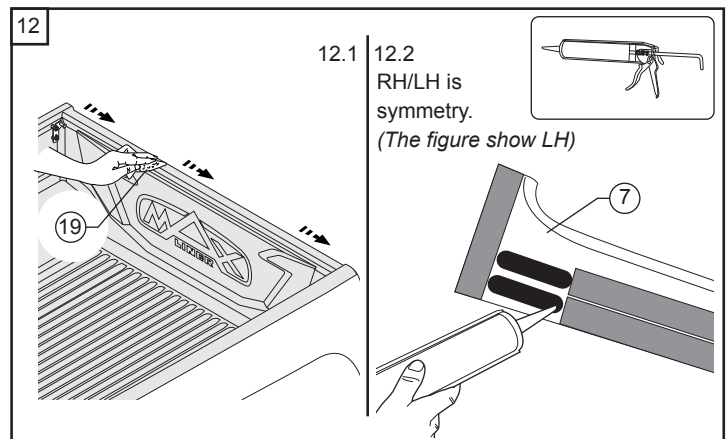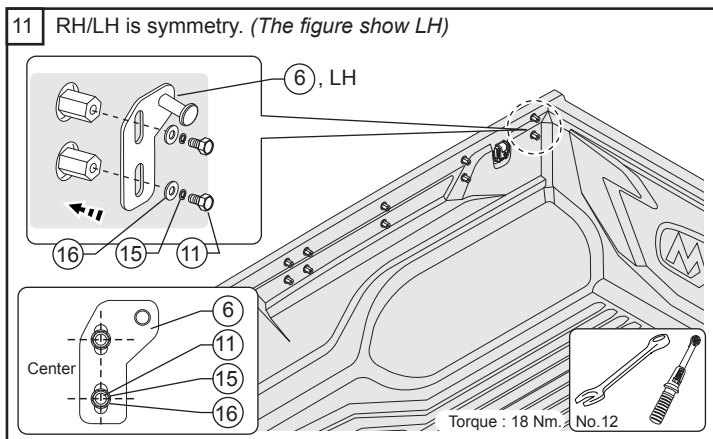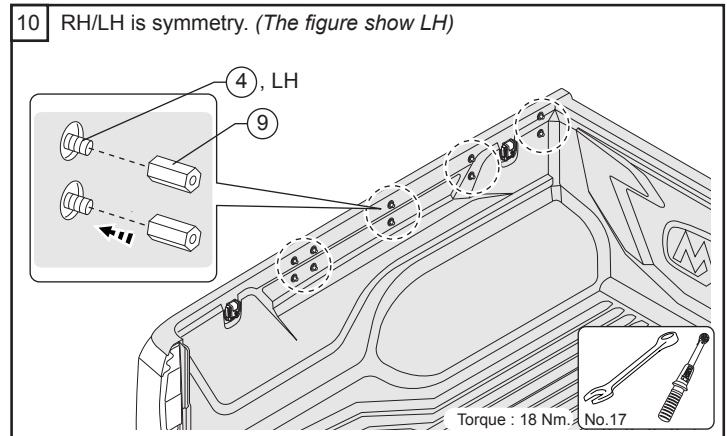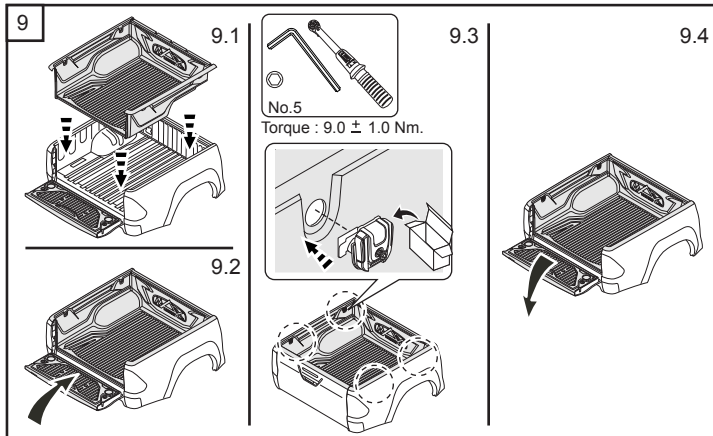


Instruction procedure (with Bedliner O/R)


17 RH/LH is symmetry. (The figure show LH)

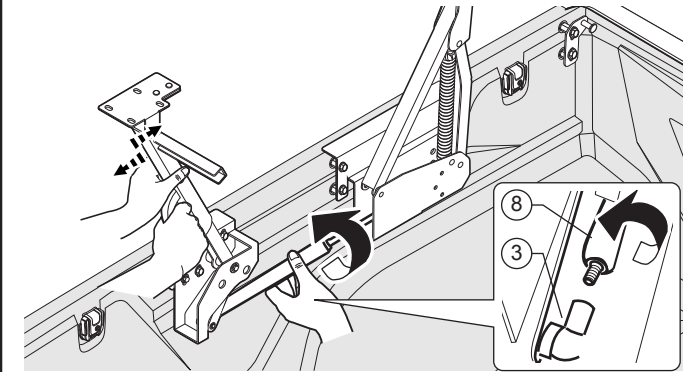


18 RH/LH is symmetry. (The figure show LH)

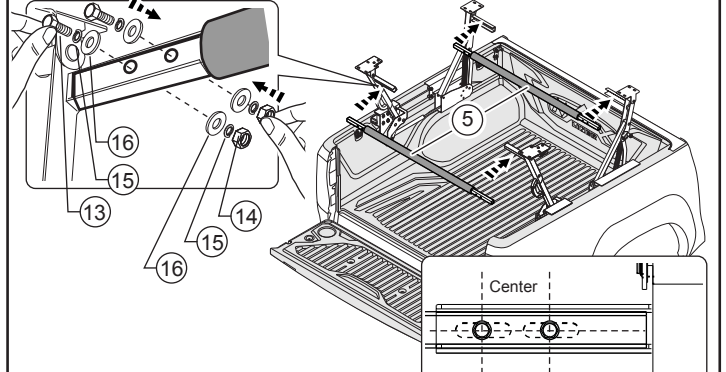


19 RH/LH is symmetry. (The figure show LH)

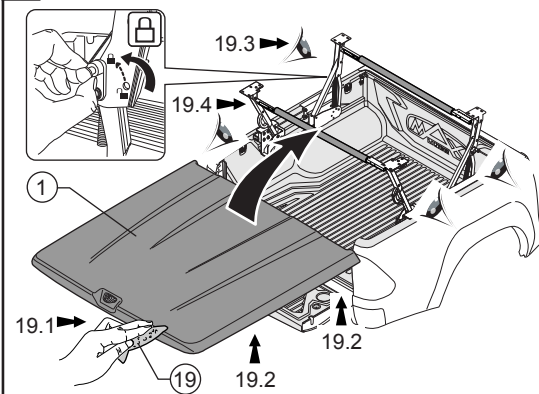


19.1

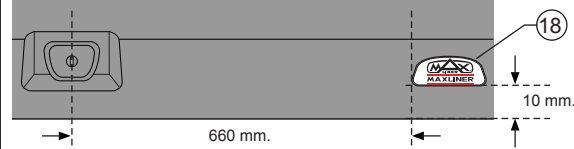


19.2

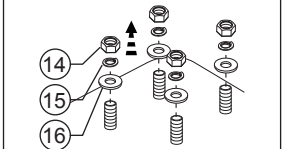


19.3

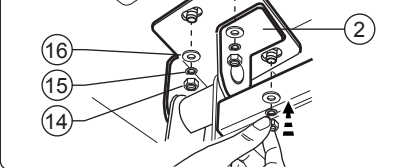


19.4

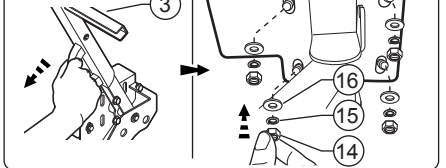


20 RH/LH is symmetry. (The figure show LH)

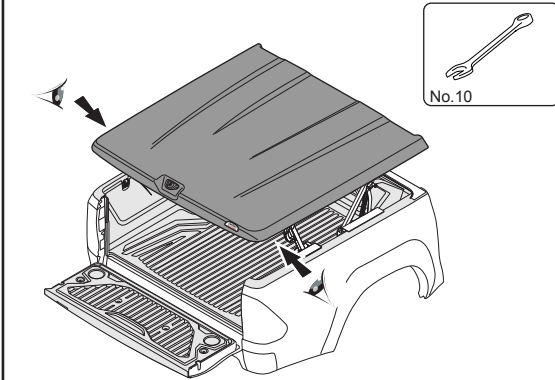


20.1

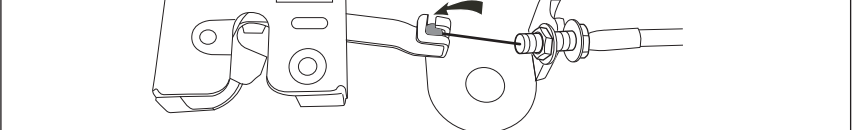


20.2

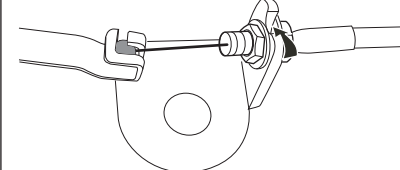


20.3

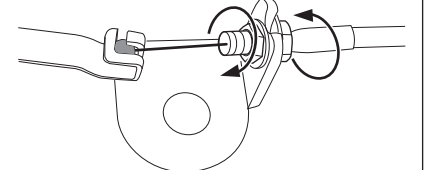

21

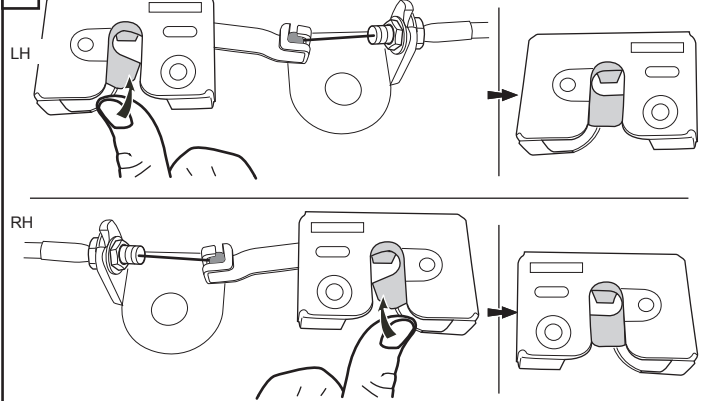


22

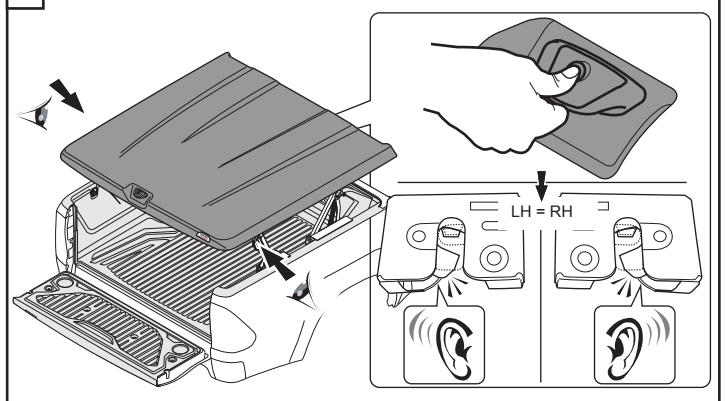


Instruction procedure (with Bedliner O/R)


23 23.1 - 23.2

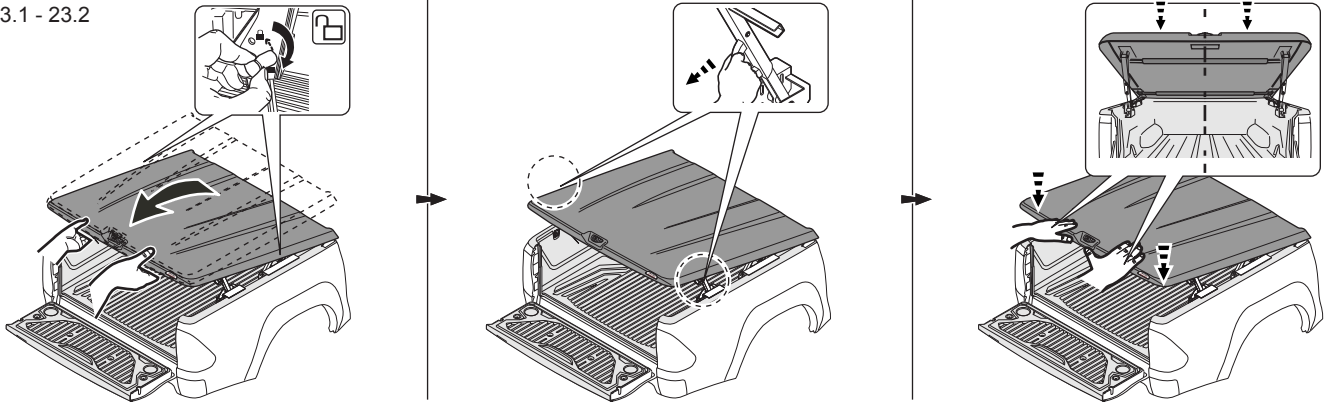


24 RH/LH is symmetry. (The figure show LH)

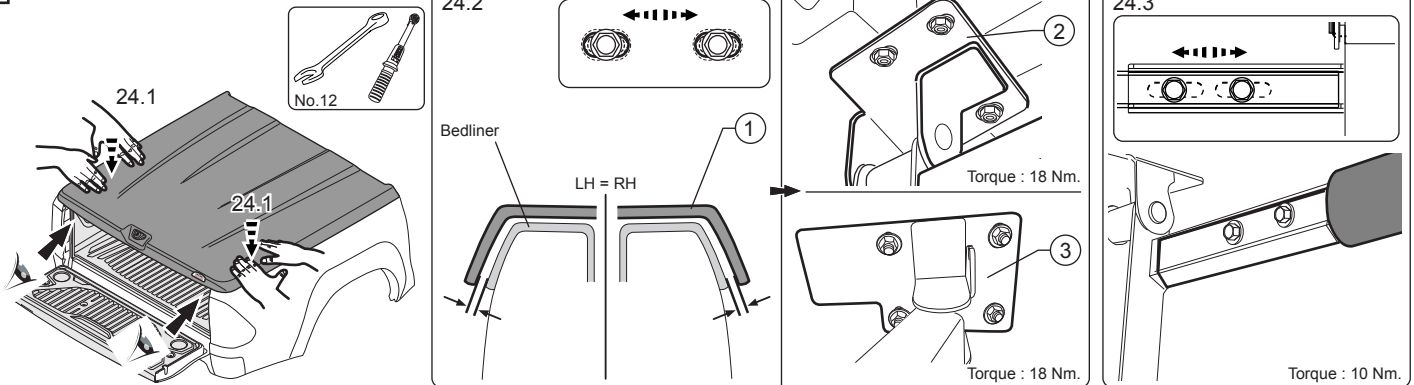



25 25.1

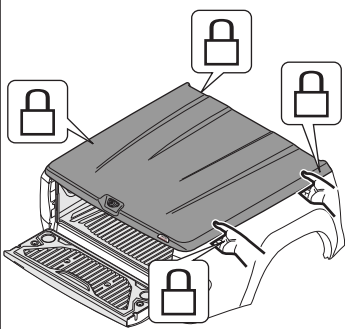









25.2

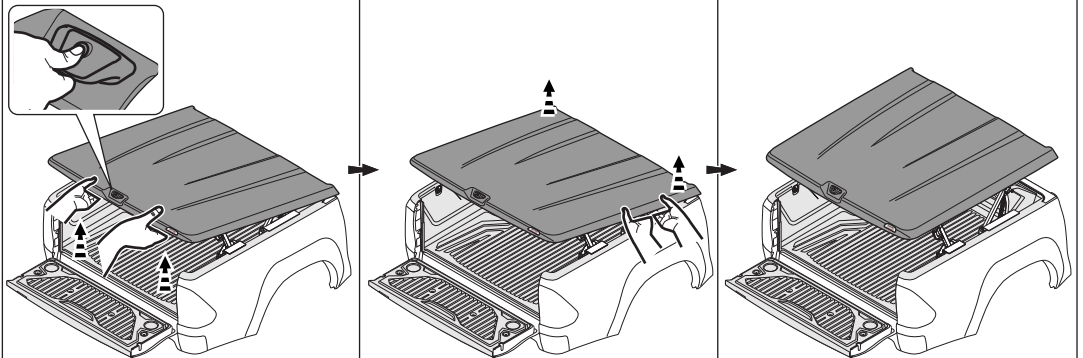

26 26.1

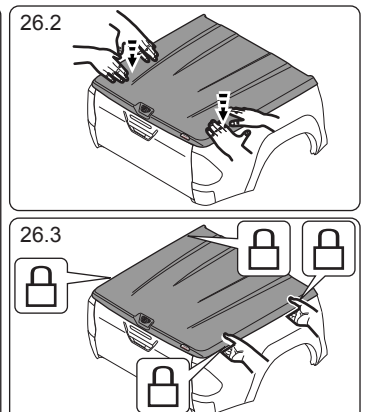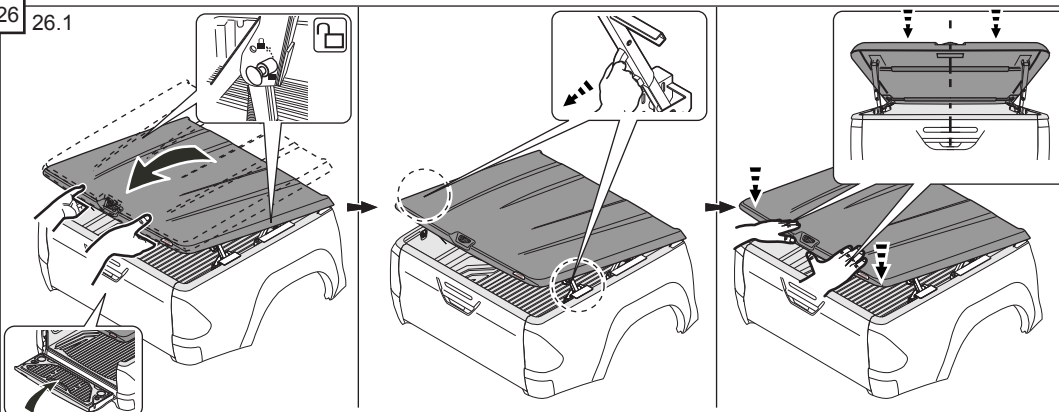


Instruction procedure (without Bedliner)

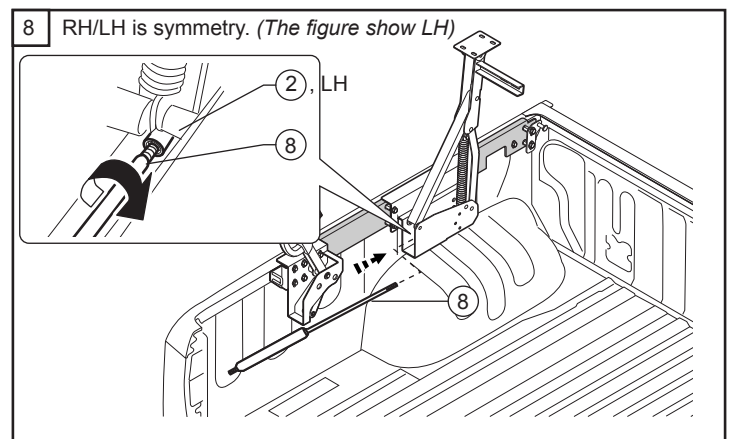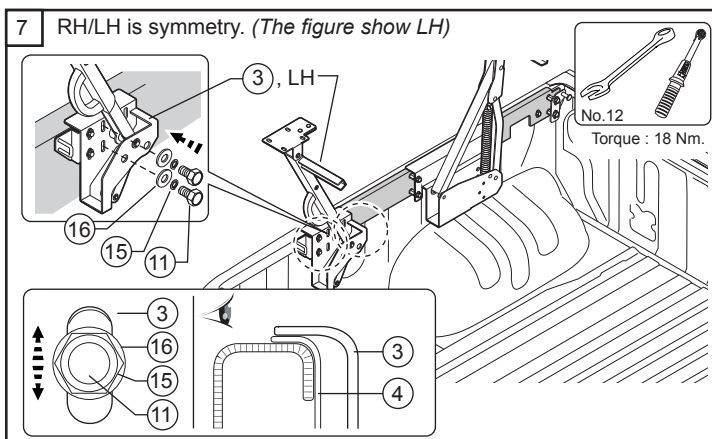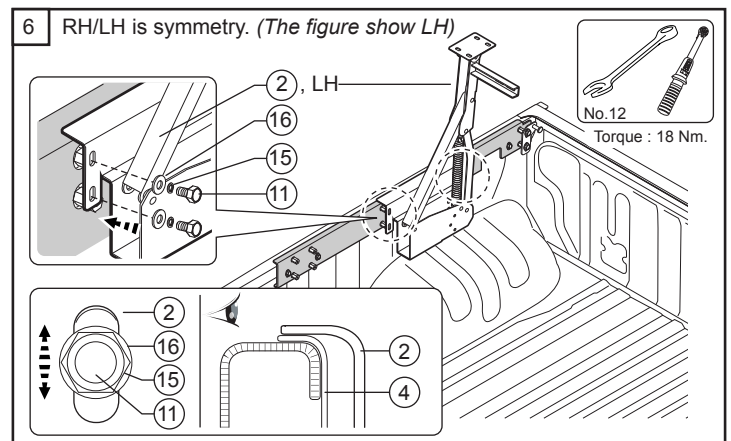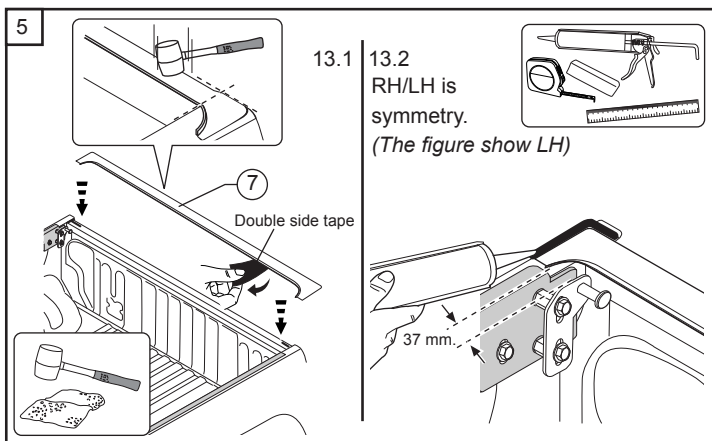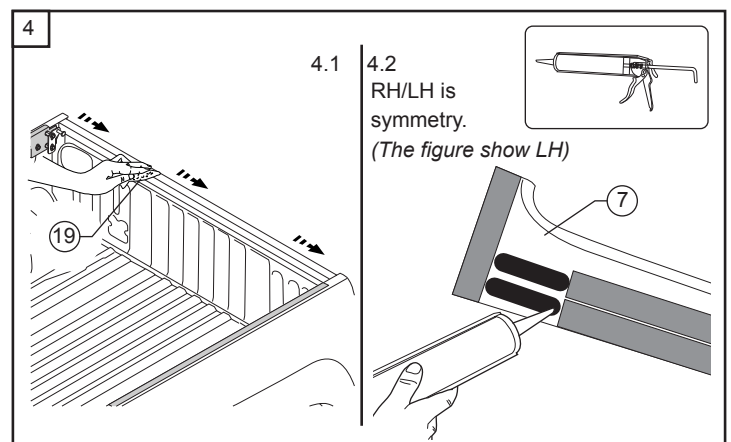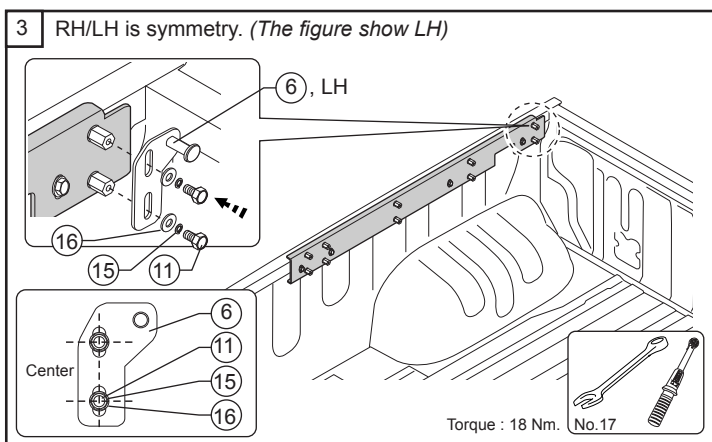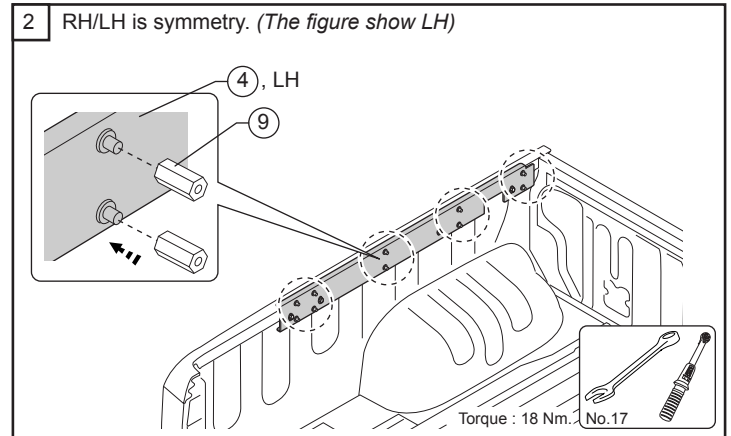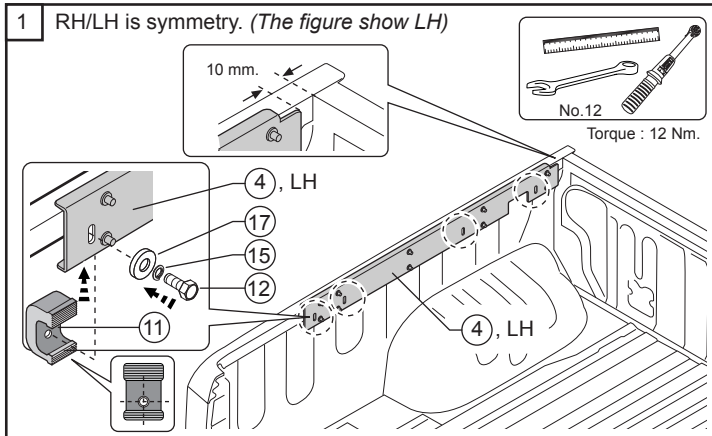


Instruction procedure (without Bedliner)


9 RH/LH is symmetry. (The figure show LH)

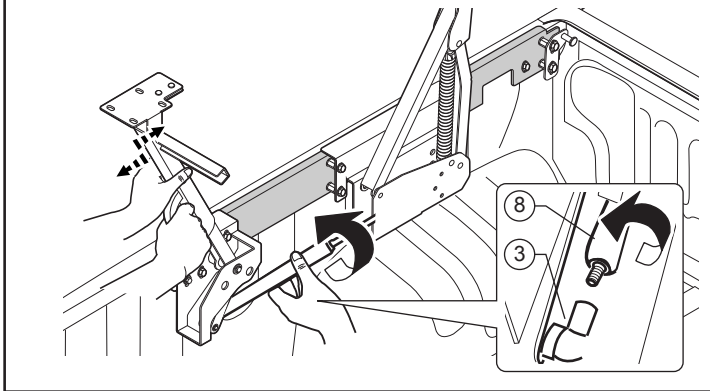


10 RH/LH is symmetry. (The figure show LH)

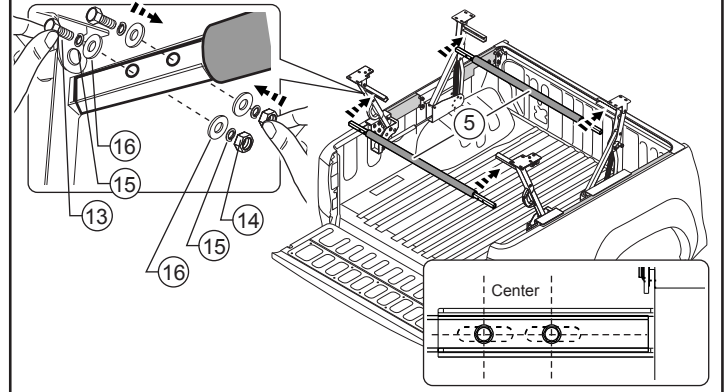


11 RH/LH is symmetry. (The figure show LH)

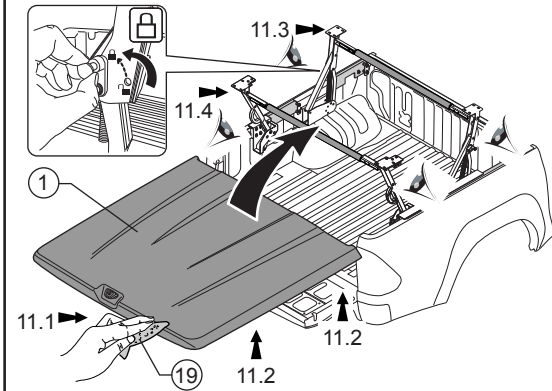


11.1

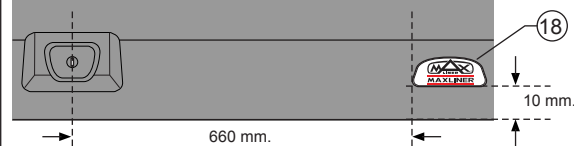


11.2

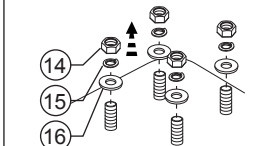


11.3

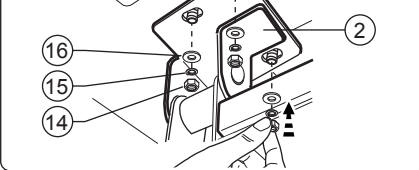


11.4

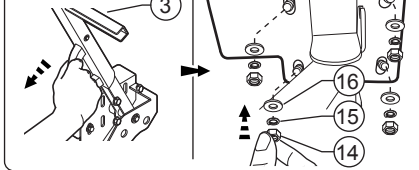


12 RH/LH is symmetry. (The figure show LH)

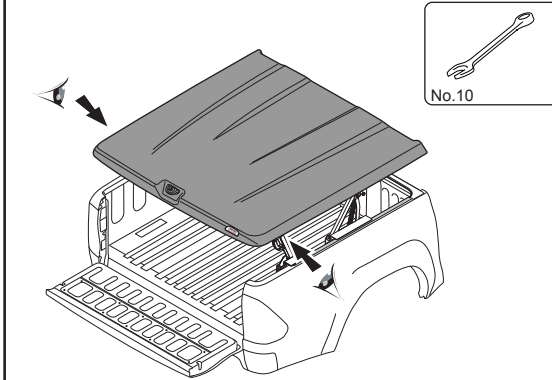


12.1

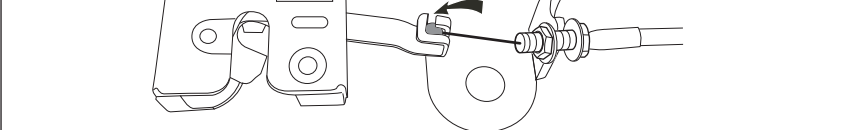

12.2

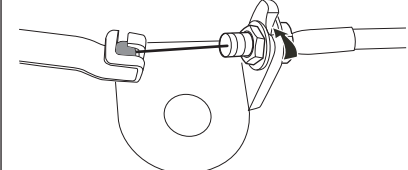

12.3

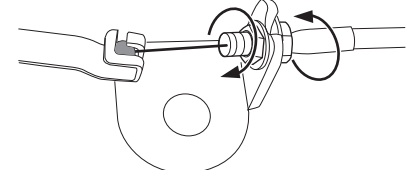


13

Adjust the lock set and check the lock like Instruction procedure with Bedliner O/R as article 21-26 (page 4-5.)


21.	22. p.4

23.
24.
25.
26. p.5


Adjust double lock (CASE 1)

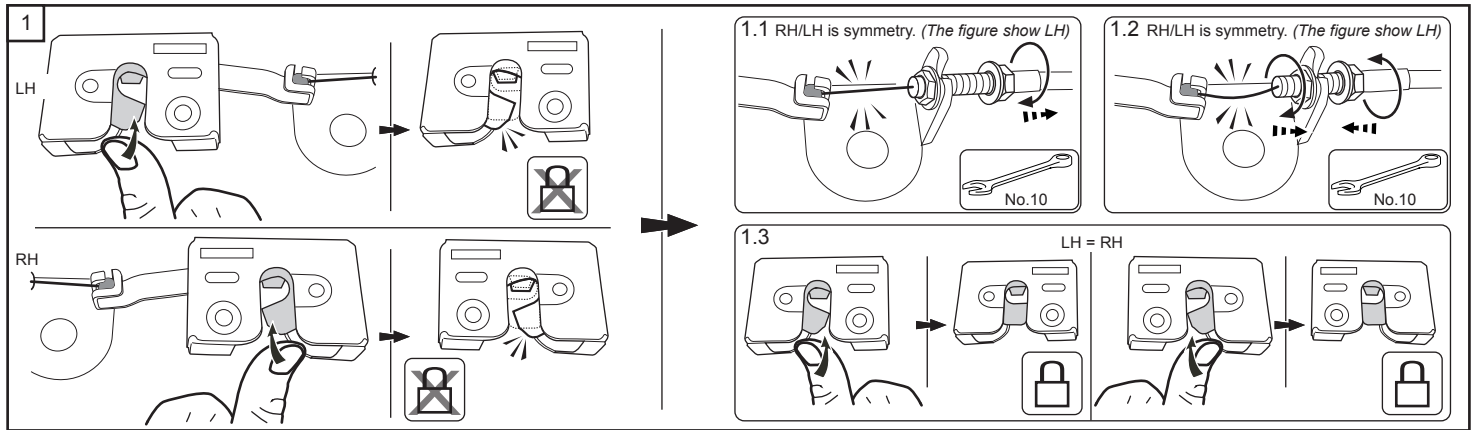


Adjust double lock (CASE 2)

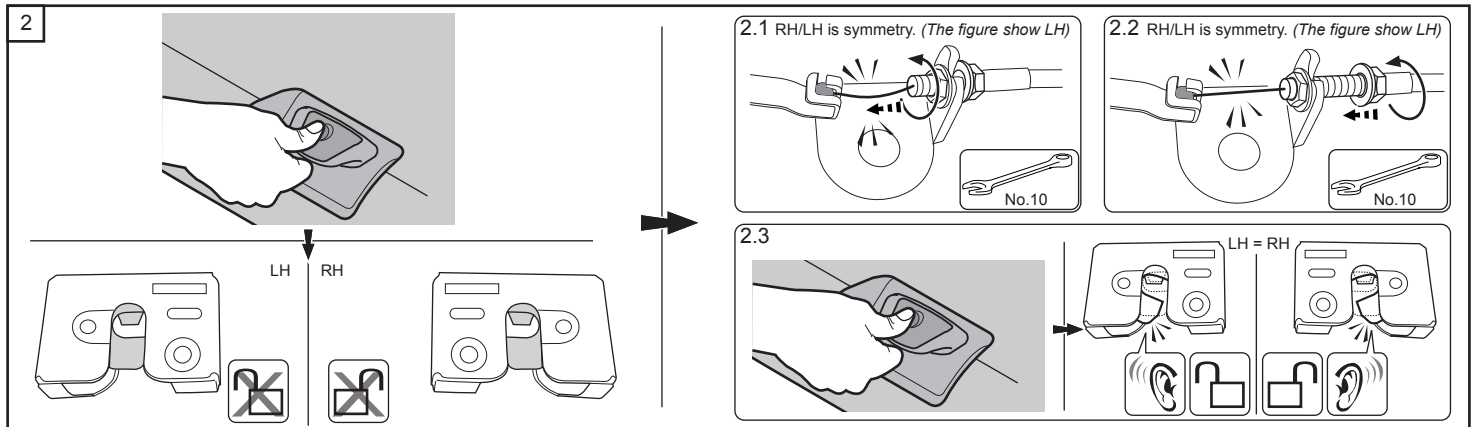

Adjust double lock (CASE 3)

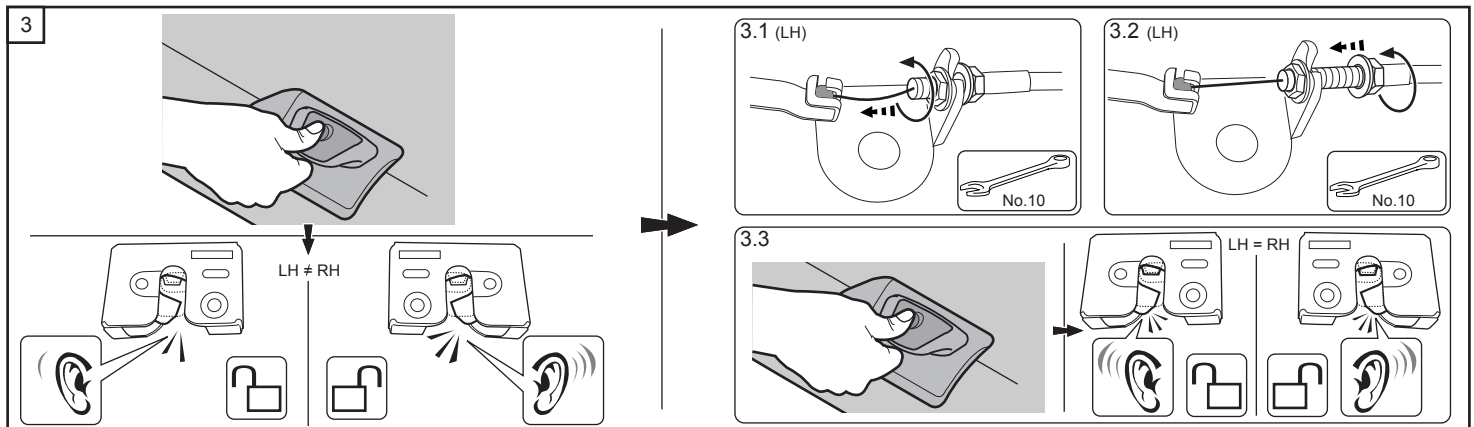


Adjust upper plate front lock & front u-lock


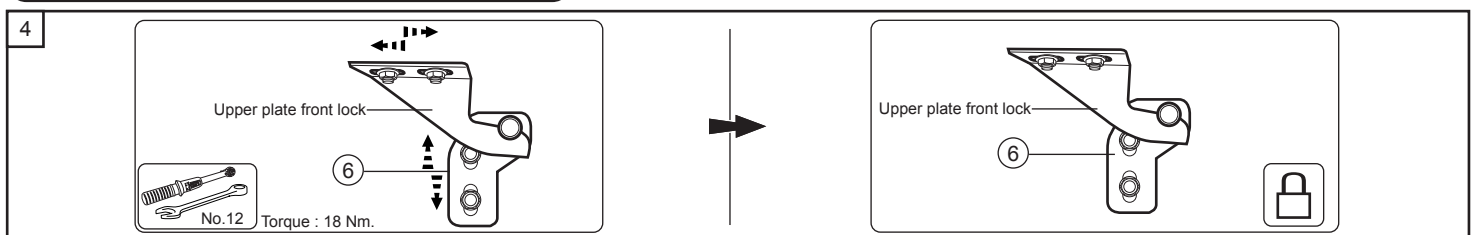


FOR CASE PAINTING BODY


1

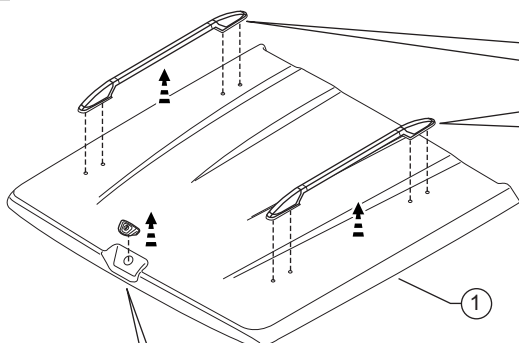


1.1 RH/LH is symmetry.

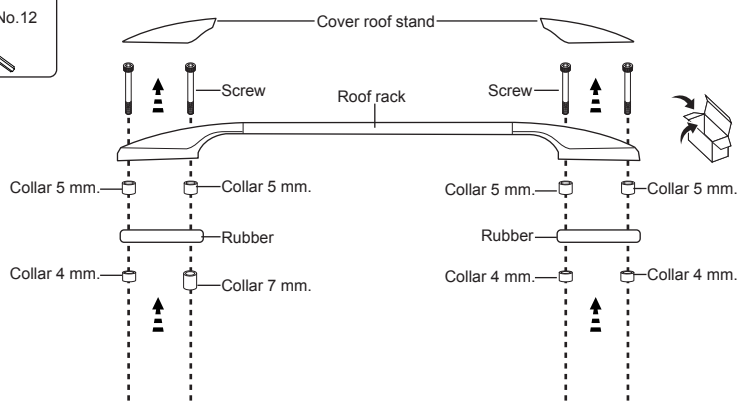


1.2

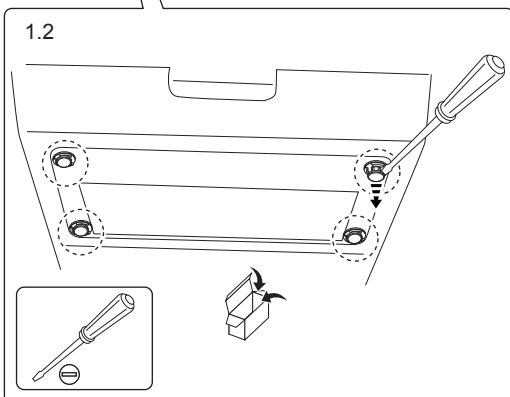

1.3


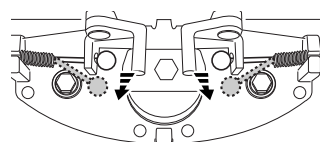


1.4

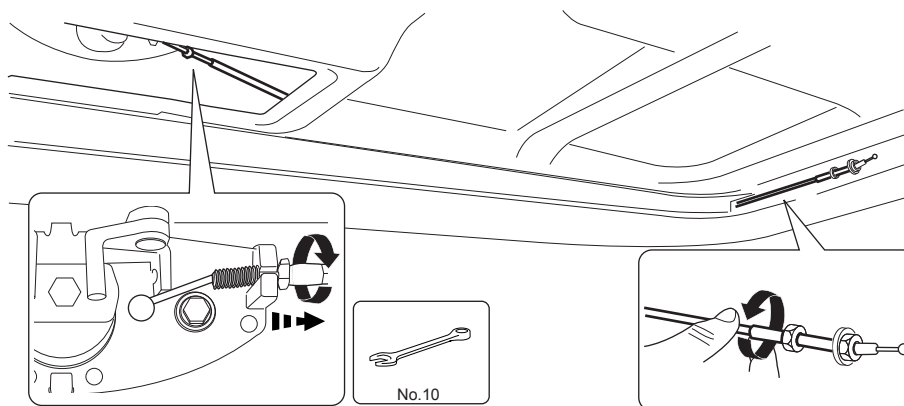


No. 10


1.5

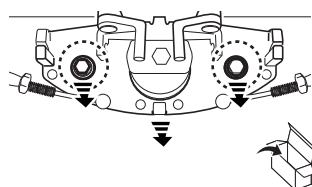

1.6

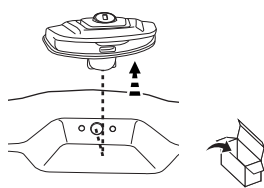

2 Painting

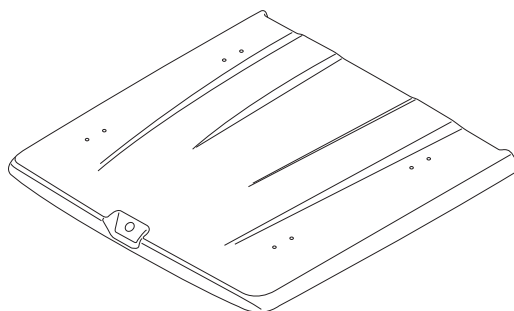

FOR CASE PAINTING BODY

