




CANOPY INSTALLATION INSTRUCTIONS

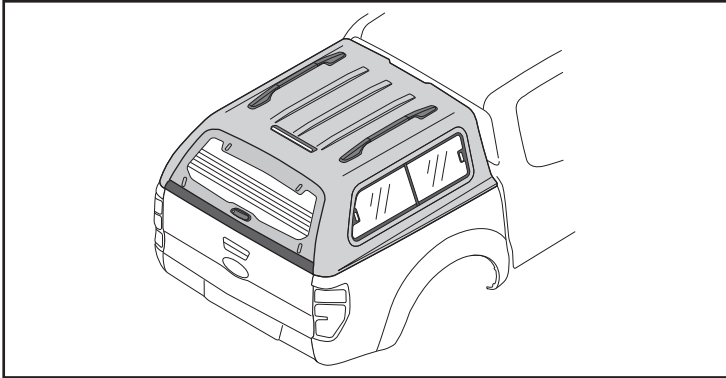

Caution for installation

Read this mounting manual carefully, before your start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.

Product name : MAXTOP S.III Full option w/defogger¢ral lock w/tinted glass
 Model name : FORD RANGER DBC 2012
 Inst.number : L04-0361

Component parts

No.	Part name							Q'ty
1.	Canopy shell set							1 Set
2.	Plate rail lock FB : 74							2 Pcs.
3.	Plate rail lock FB : 75							2 Pcs.
4.	Plate rail lock FL : 82							2 Pcs.
5.	Plate rail lock FL : 76							2 Pcs.
6.	Plastic cap nut, Hex nut M8, Plain washer M8x25							8 Sets
7.	Emblem							2 Pcs.
8.	Battery AAA							4 Pcs.
9.	Front harness set							1 Set
10.	Tab							4 Pcs.
11.	Cable tie 24"							3 Pcs.
12.	Cable tie 8"							10 Pcs.

Tools used

 No.8,12	 Silicone non acid No.8,12	 Silicone dispensing gun	 Measurement	 Methyl alcohol 100%	
 No.5					



Vandapac Co., Ltd.

700/135 Moo 5, Klongtumru, Muang Chonburi, Chonburi 20000 Thailand Tel : (038)468-008 Fax : (038)468-006 Email : mail@vandapac.com

Instruction procedure (without bedliner)

1

2

3

4

5

6

7

8

9

10

Instruction procedure (with bedliner)

1

No.5

2

2.1 Torque = 9.0 ± 1.0 Nm.

2.2 Torque = 9.0 ± 1.0 Nm.

No.5 No.5

Only metal super lock

3

Silicone (Not supplied)

100 mm. 150 mm.

Silicone

Section

8 mm. 8 mm.

4

Silicone (Not supplied)

5

5.1

5.2

① ④

6

7

≥15 mm.

(=) (=)

≥15 mm.

8

≥8 mm. ≥8 mm.

≥8 mm. ≥8 mm.


≥8 mm.

9


4 - 10 mm.

* RH/LH different < 3 mm.



Instruction procedure (with bedliner)

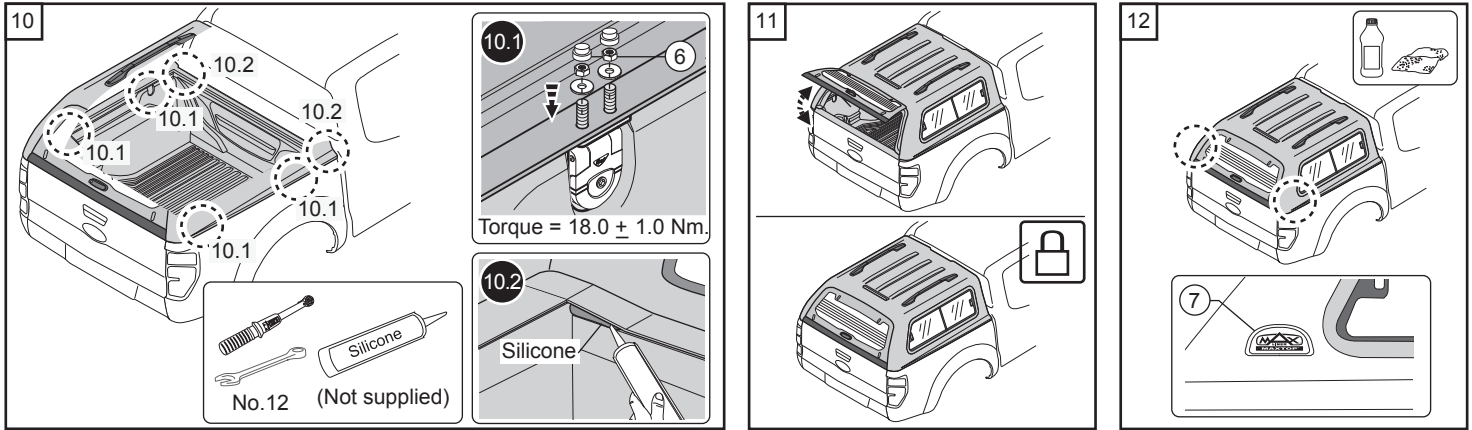





Instruction procedure (Cord set)

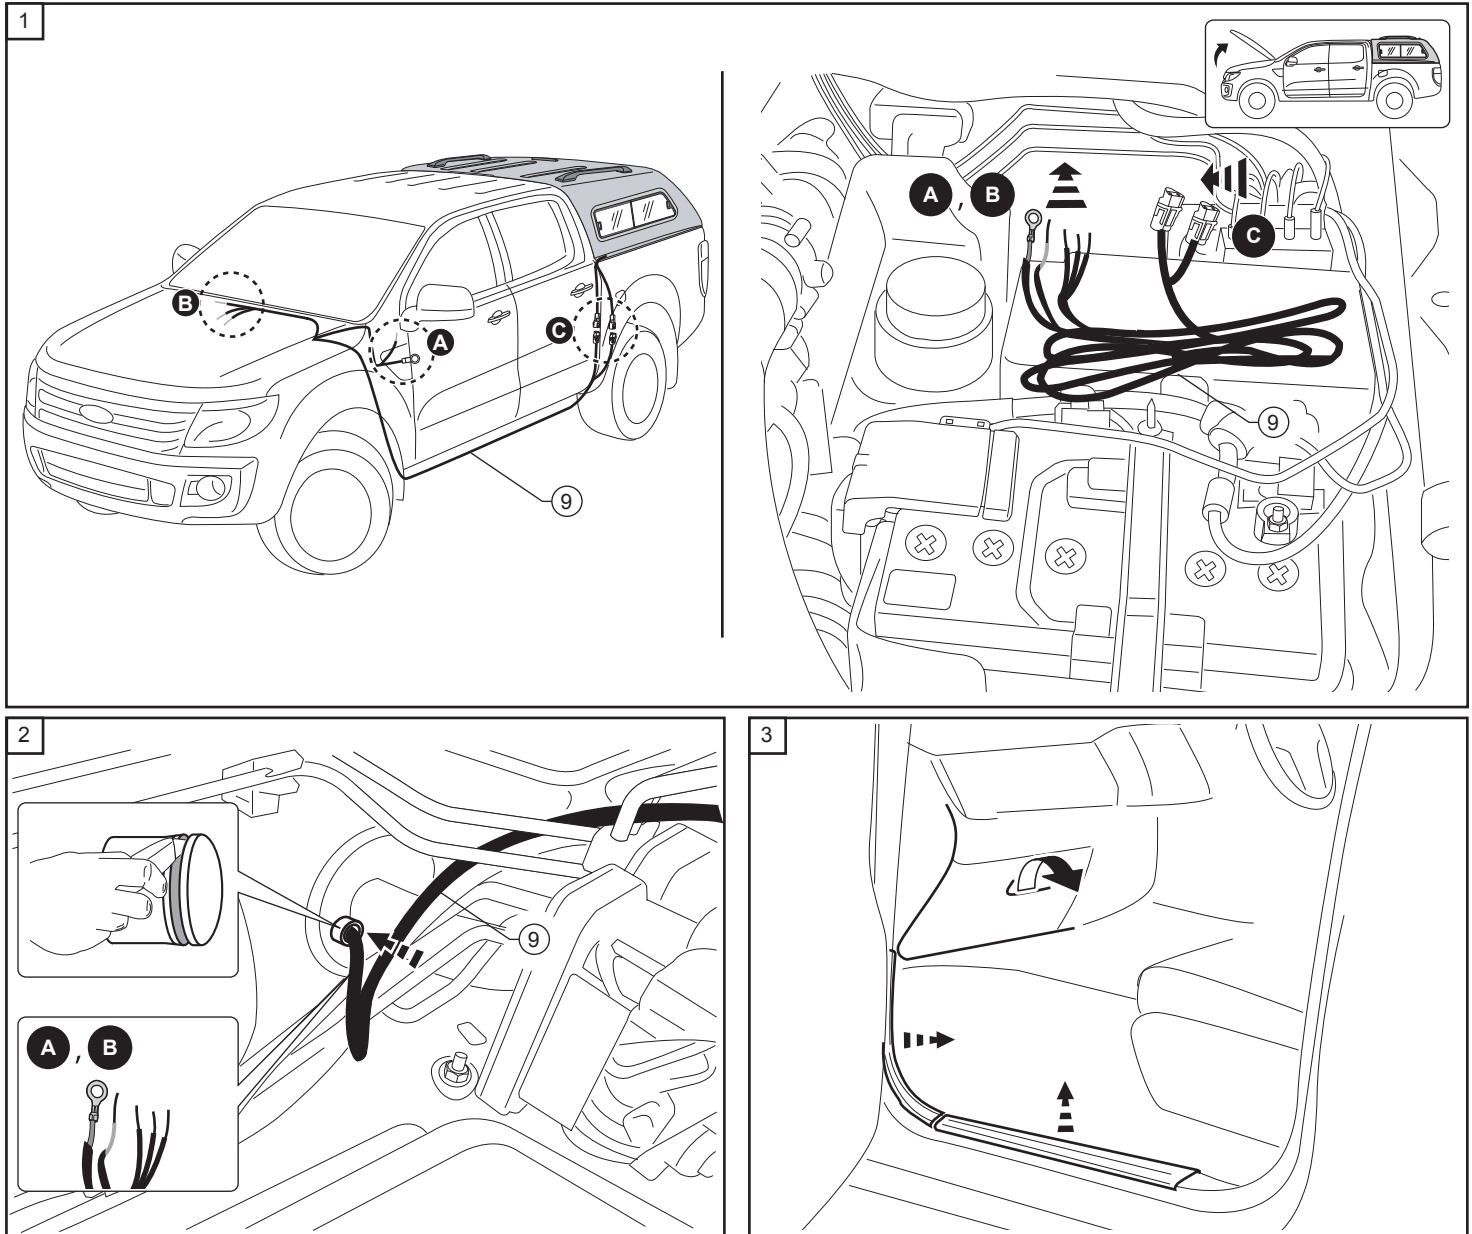

Instruction procedure (Cord set)

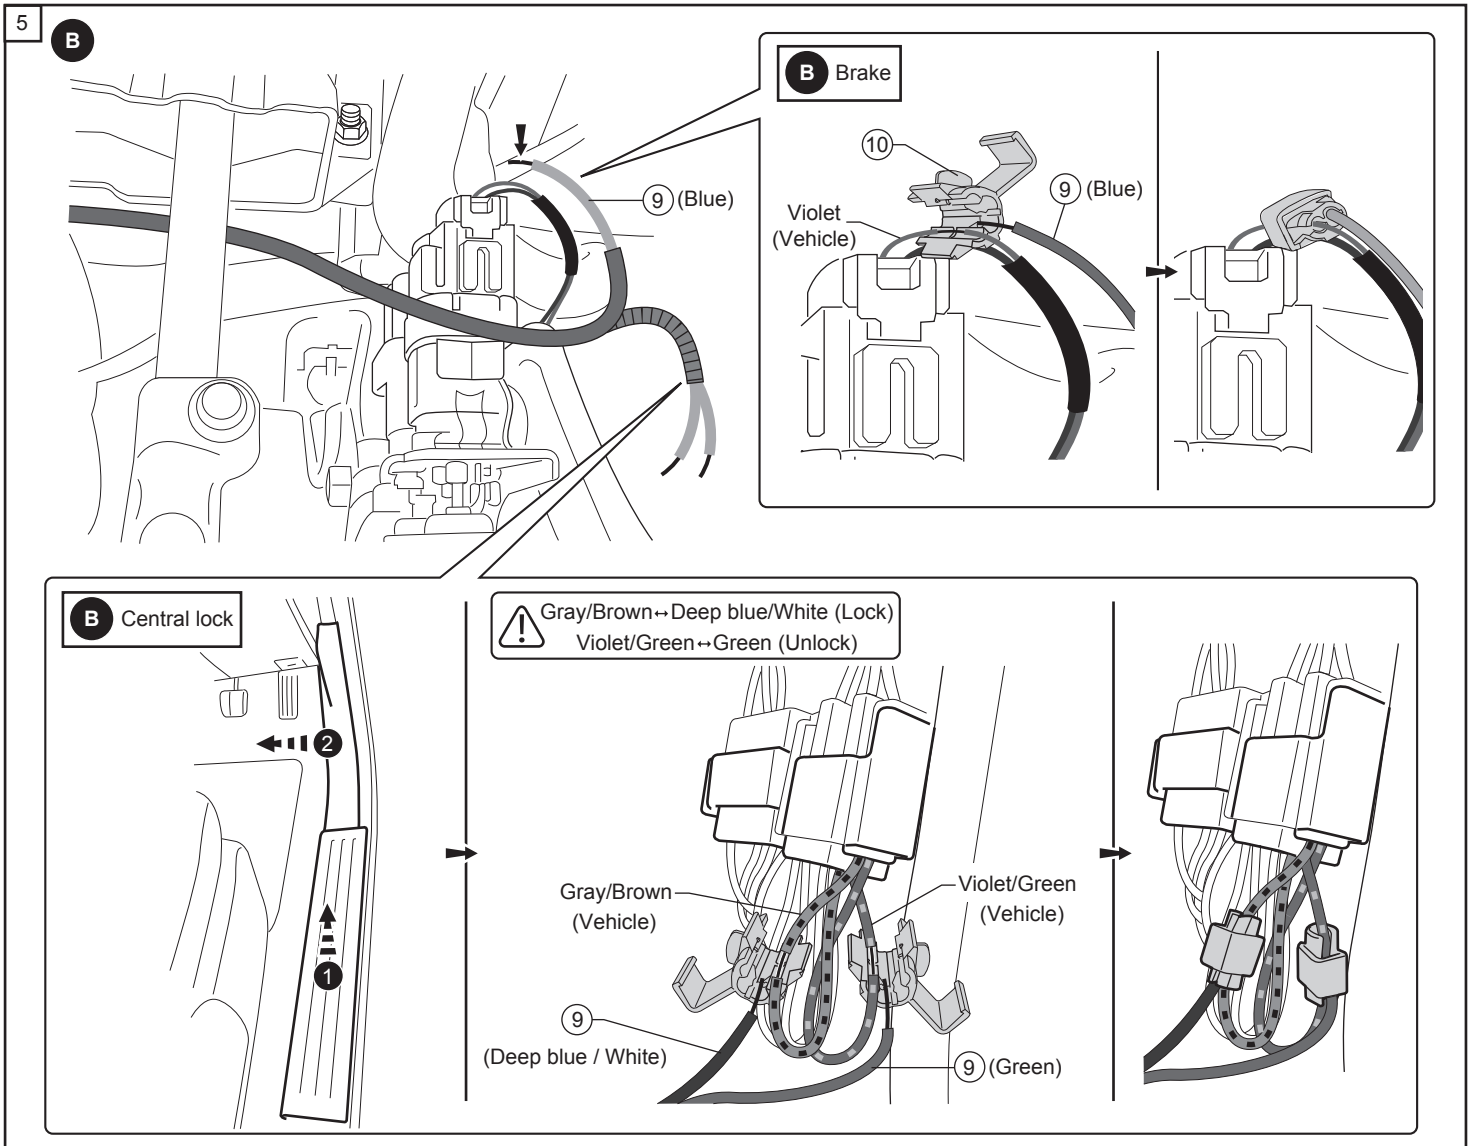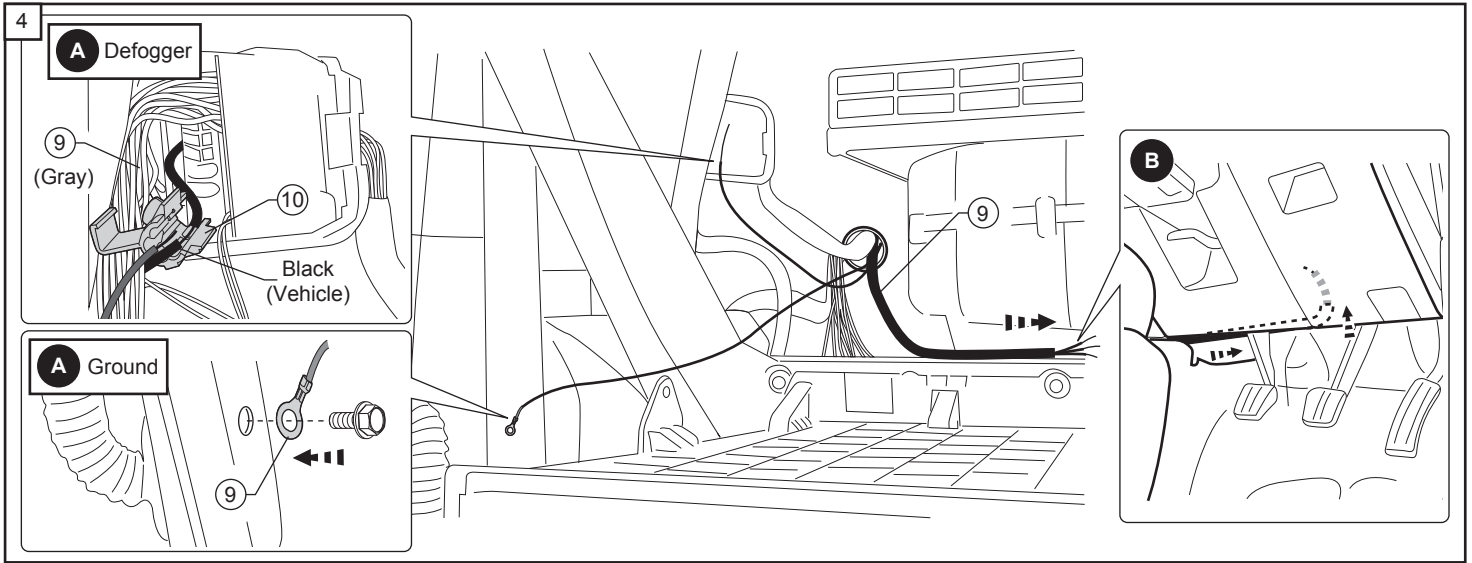

Instruction procedure (Cord set)

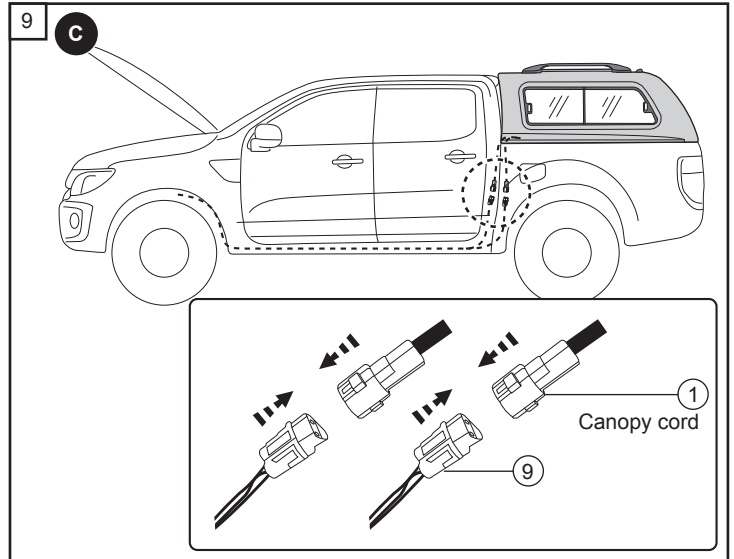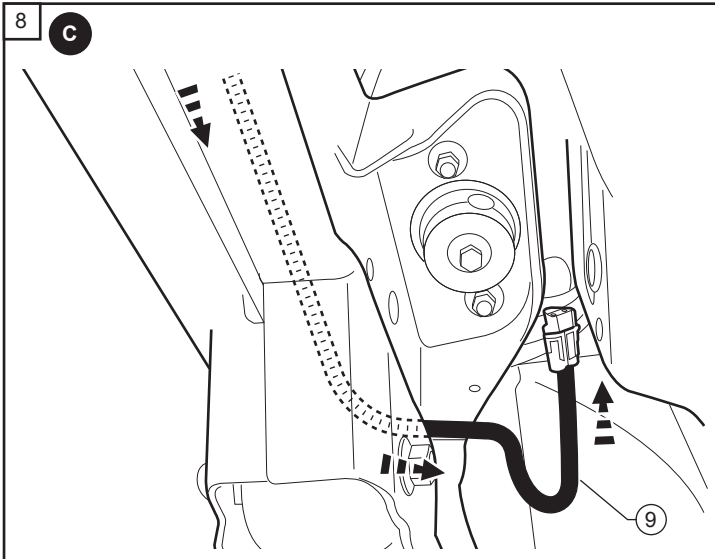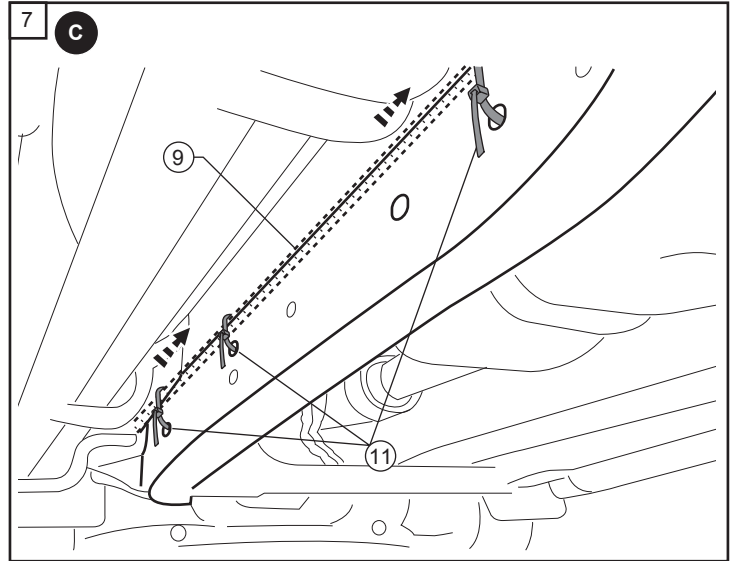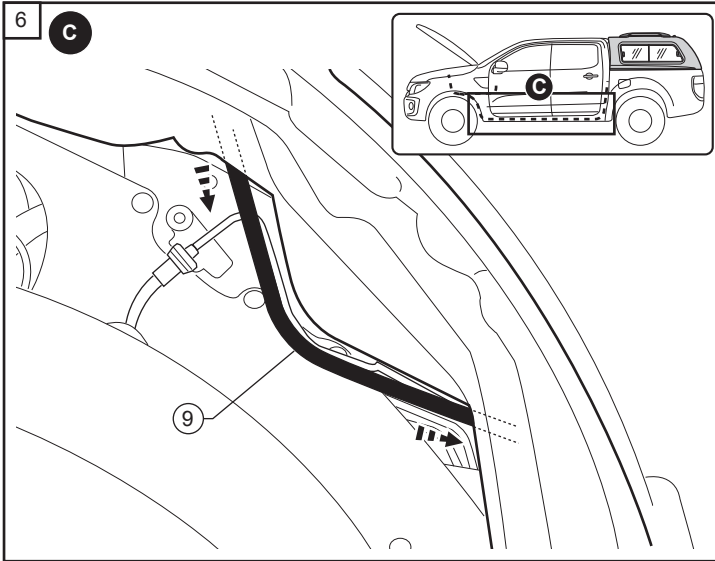

NOTE : ROOM LAMP

