




INSTALLATION INSTRUCTIONS MANUAL

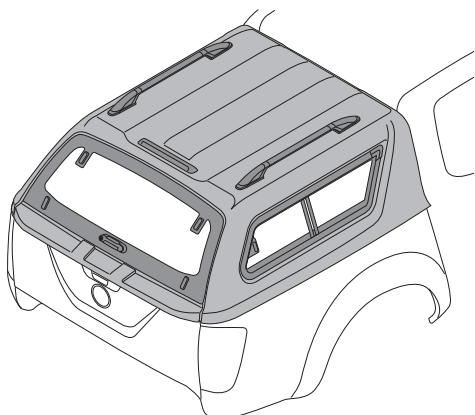



Caution for installation

Read this mounting manual carefully, before your start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.

Product name	MAXTOP S.III (FULL OPTION W/CENTRAL LOCK)
Model name	NISSAN D23 DBC 2015+ (EU)
Inst. number	L04-0415

Component parts

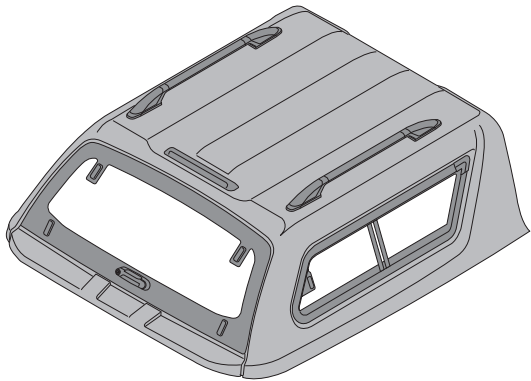Component parts					
1  x1	2 FB  x4	3 FB  x4	4 FL  x4		
		5 Set M8x40  x4	6 Set M8x30  x16	7 Set M8  x8	
		8  x4	9 AAA  x4	10  x1	
11 24"  x5	12 8"  x10	13  x2	14  x2	15  x1	16  x2

Tools used








 No.12	 	 	 	 No.10
 No.5	 Silicone	 	 	 Methyl alcohol 100%





Vandapac Co., Ltd.

700/135 Moo 5, Klongtumru, Muang Chonburi, Chonburi, 20000 Thailand Tel : (038)468-008 Fax : (038)468-006 Email : mail@vandapac.com







—Instruction procedure without bed liner—

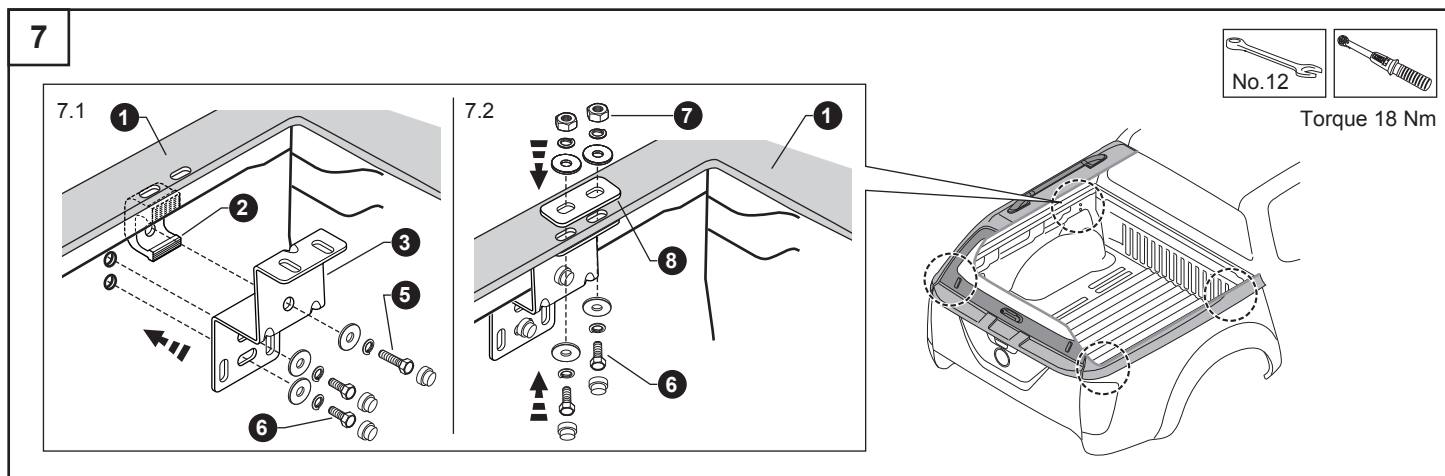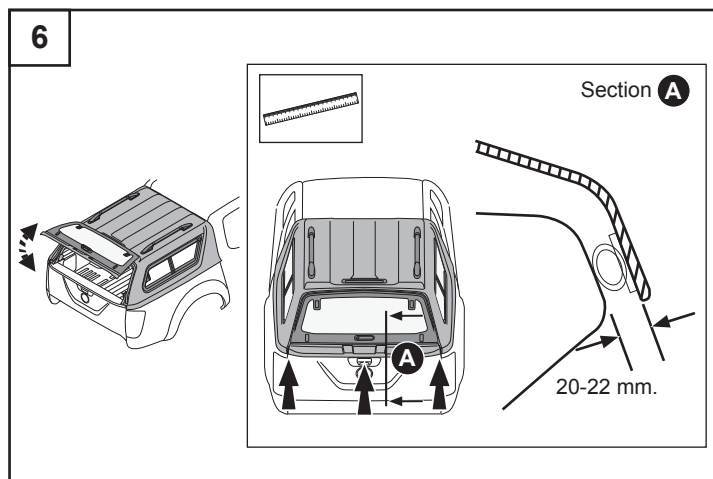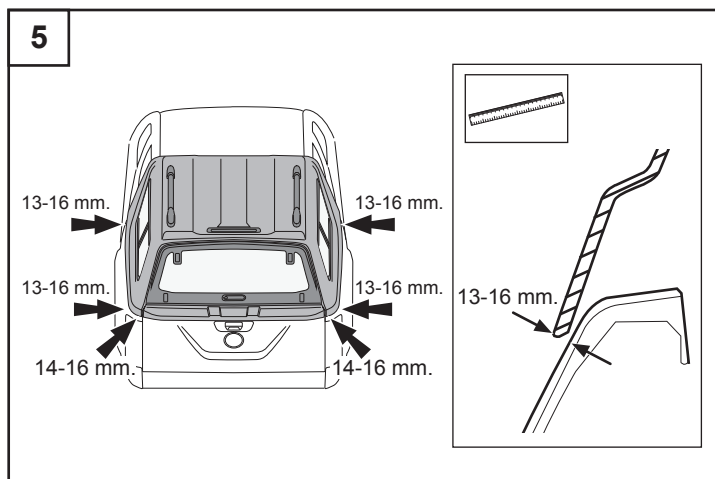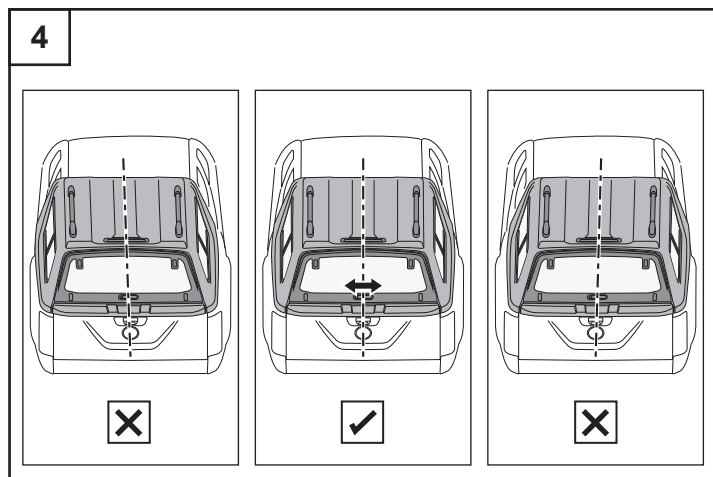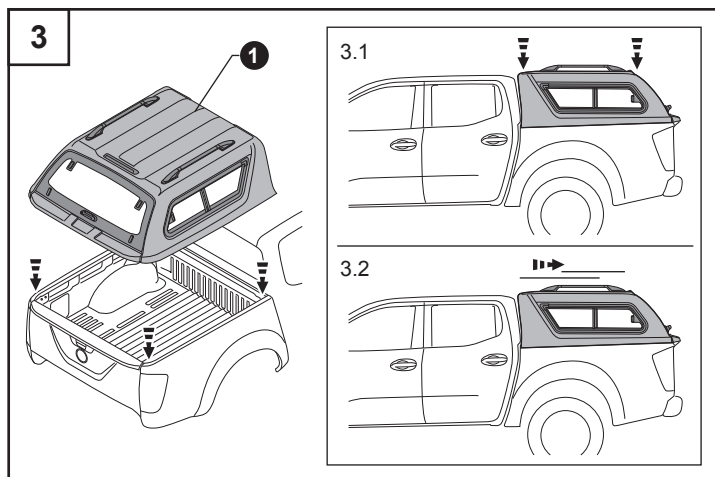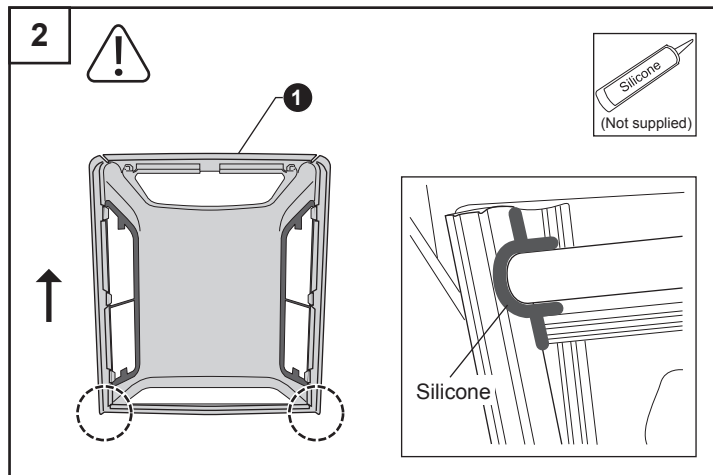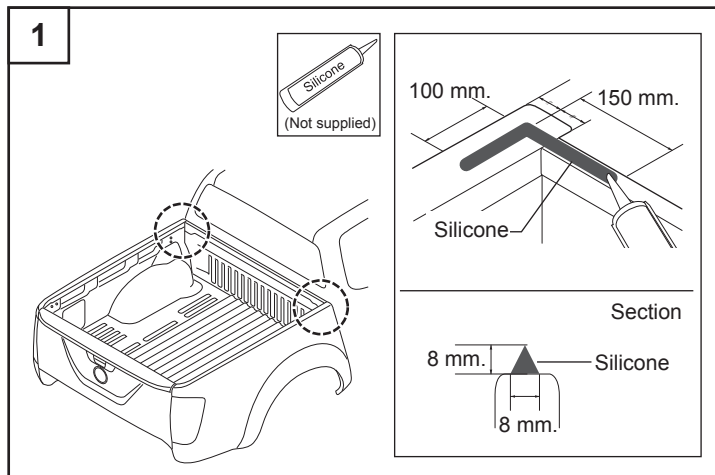





— Instruction procedure without bed liner —

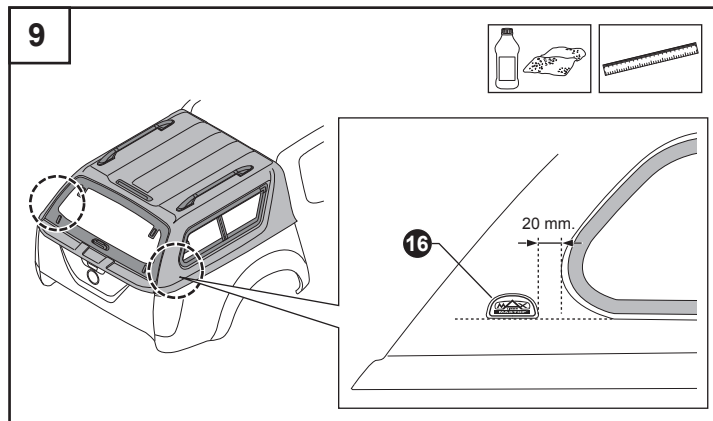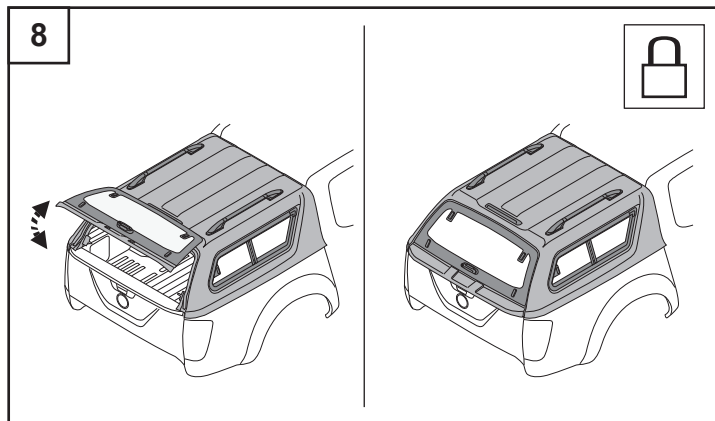


— Instruction procedure with bed liner o/r —

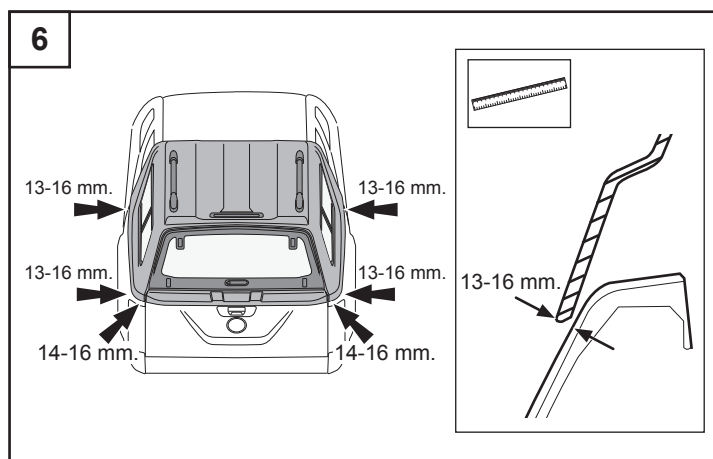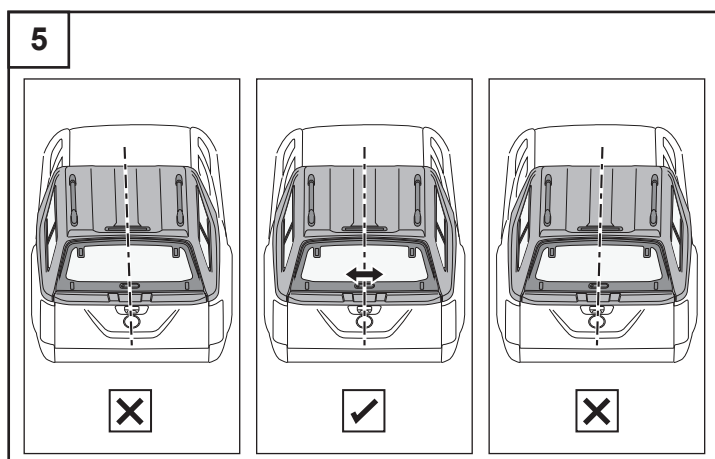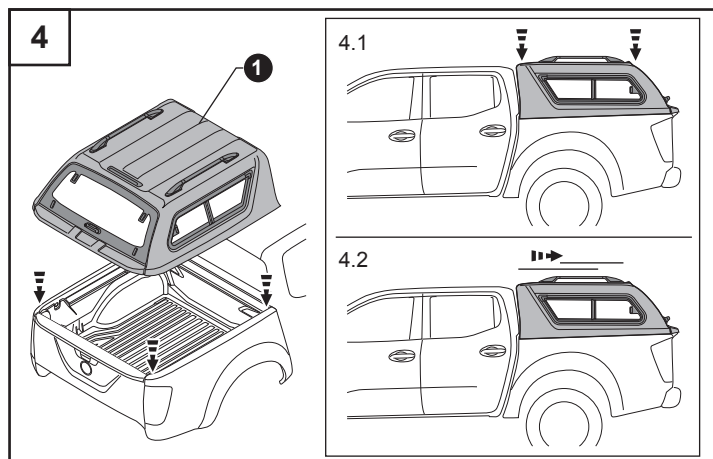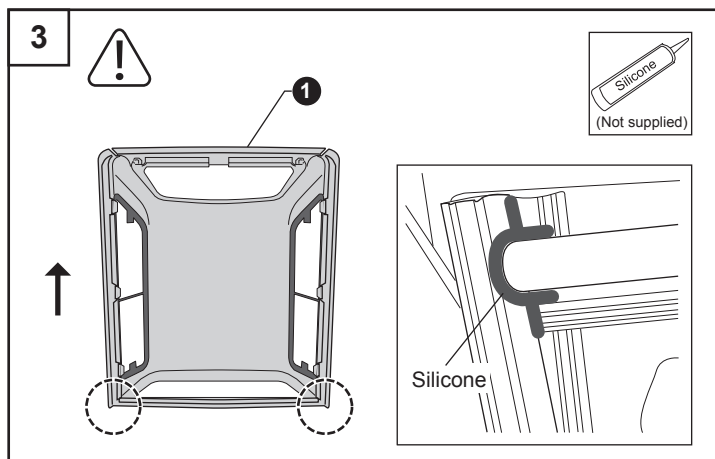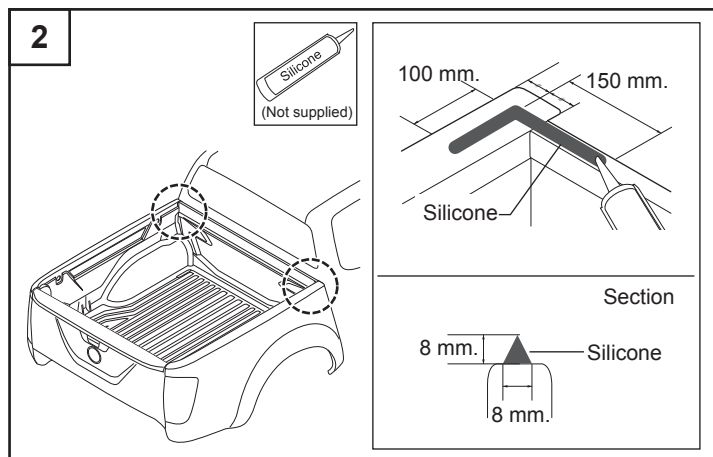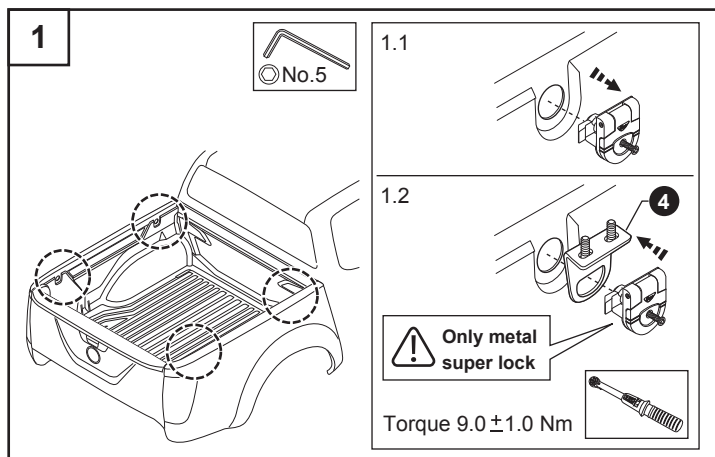





— Instruction procedure with bed liner o/r —

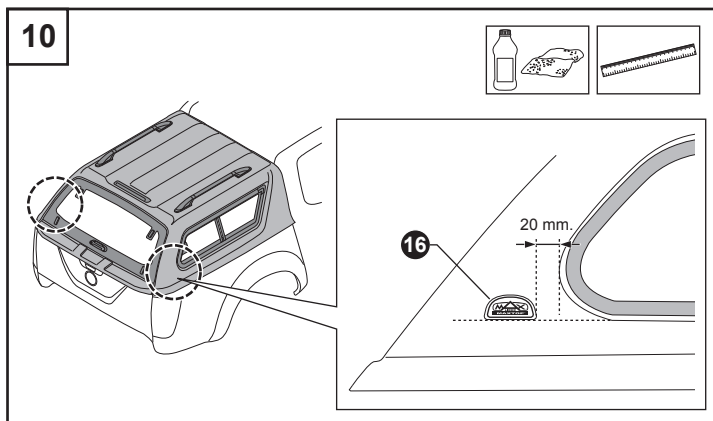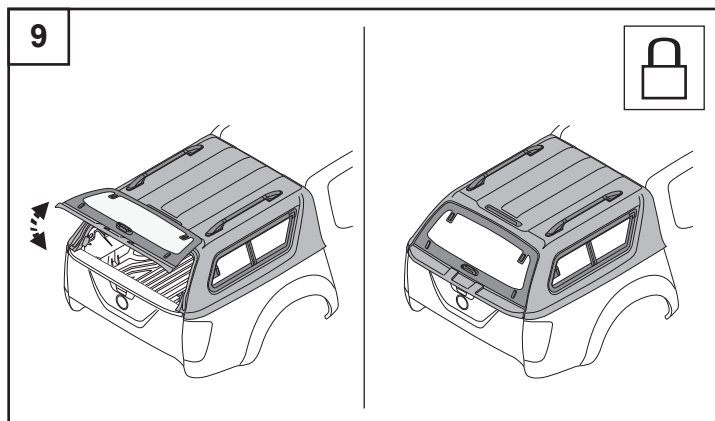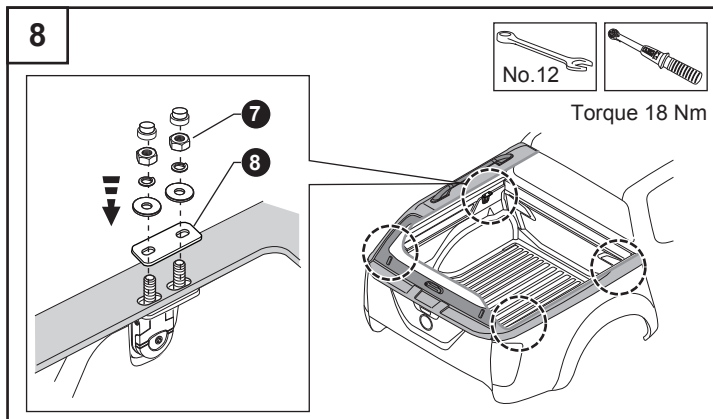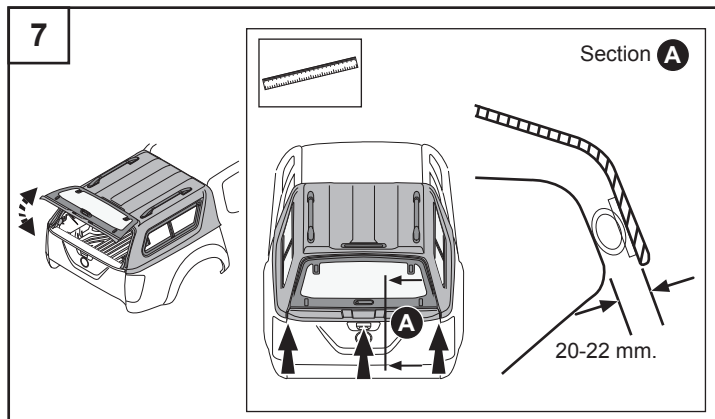


NOTE : ROOM LAMP


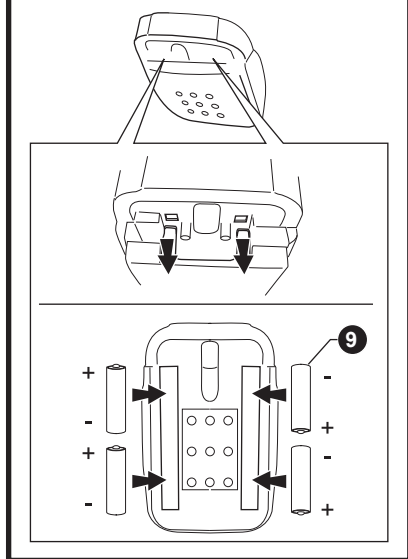


— Instruction procedure seal rubber

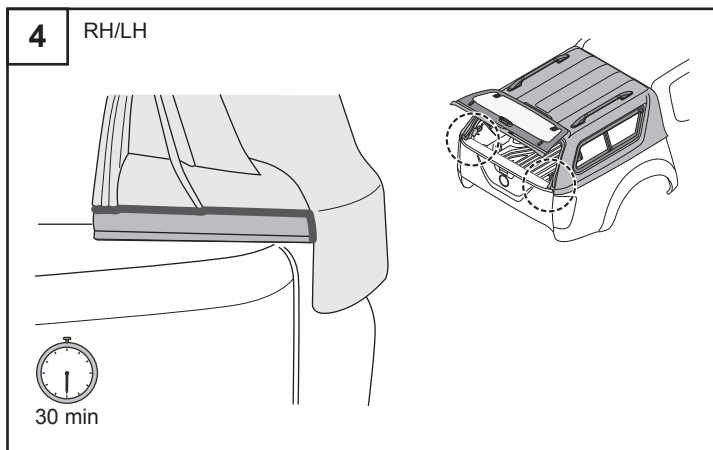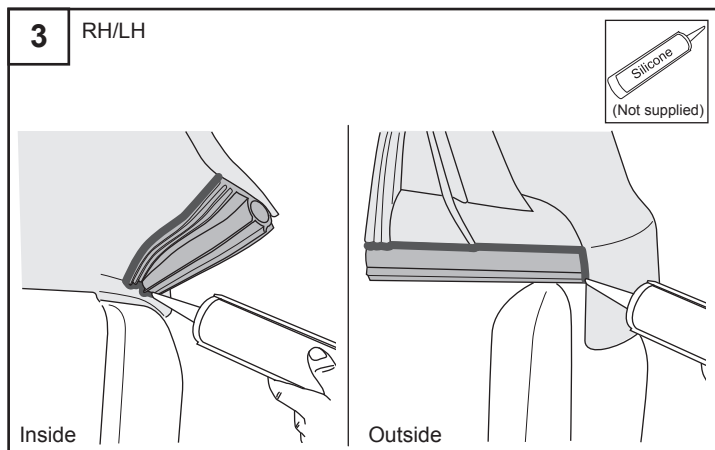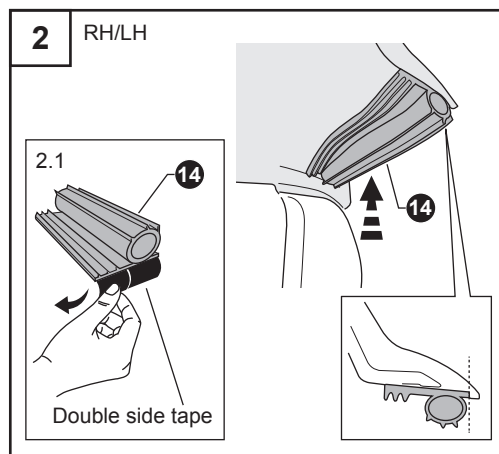
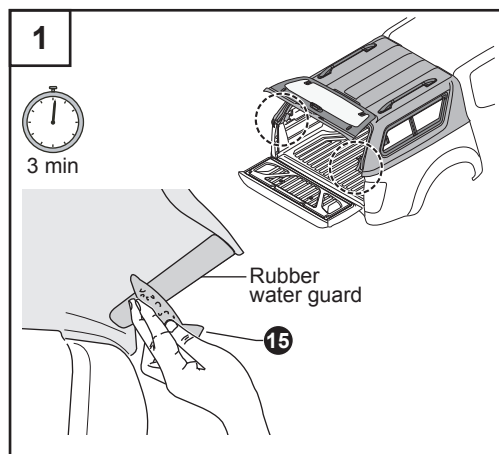


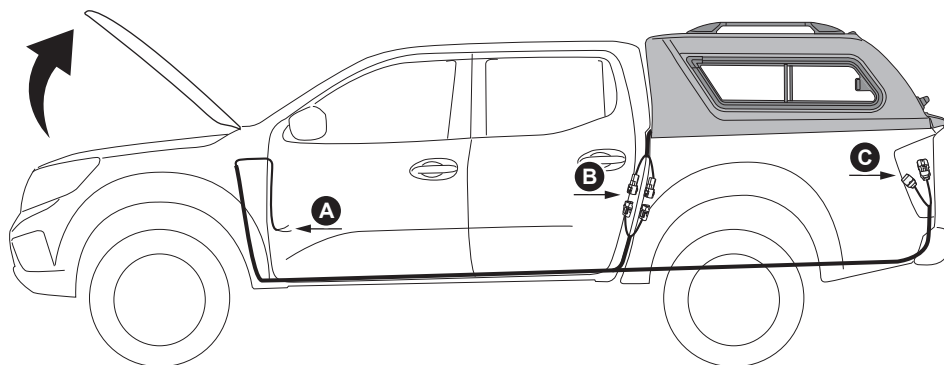



A

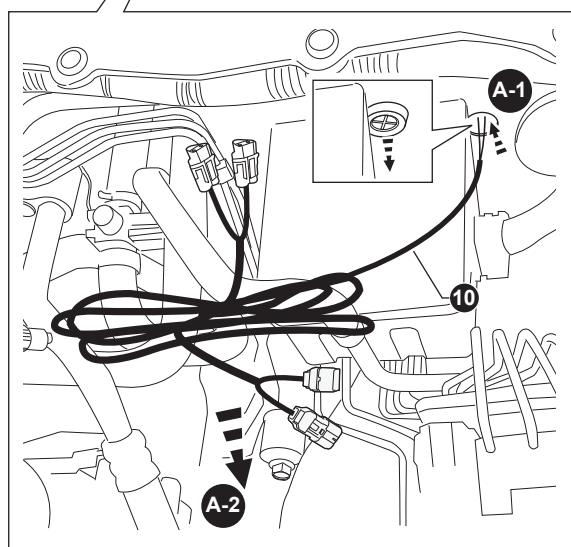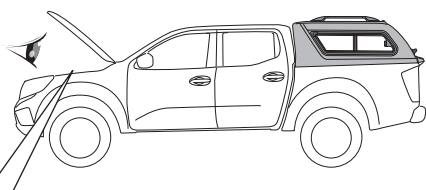



A-1

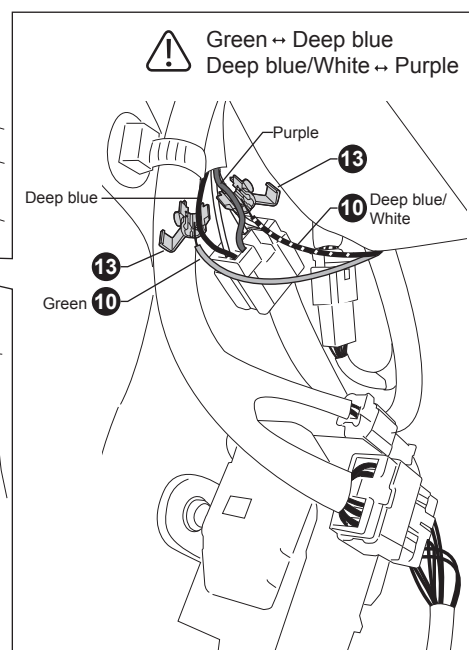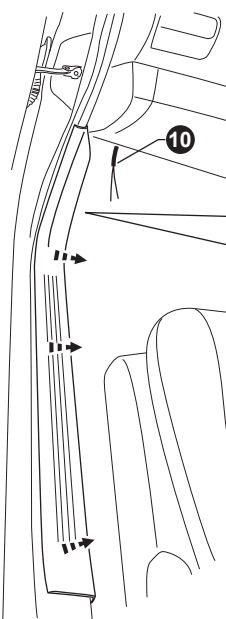

A-2

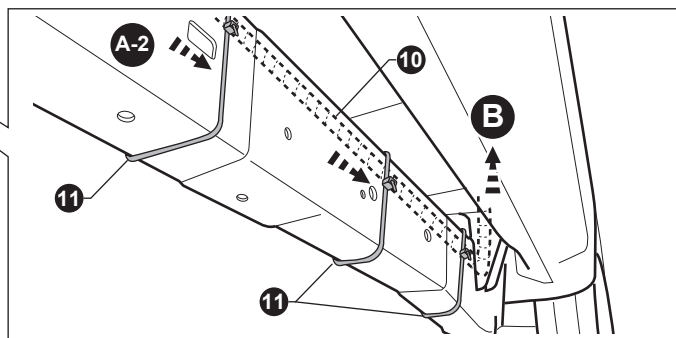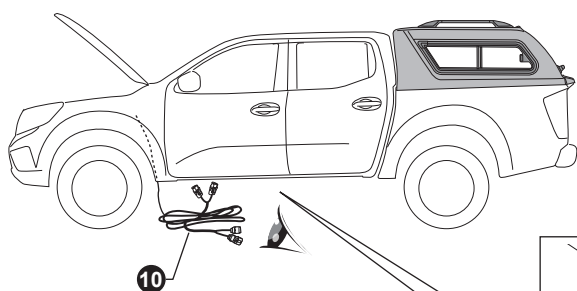

B

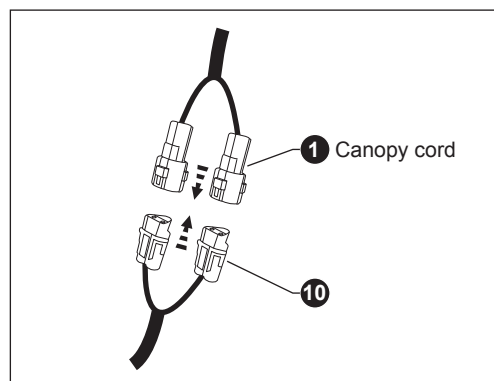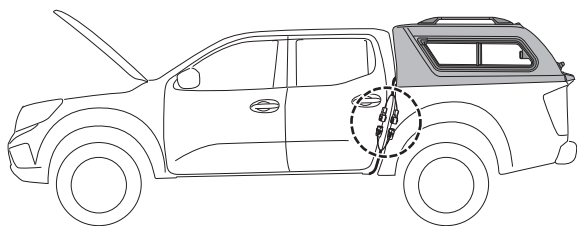

C

