


FENDER FLARE INSTALLATION INSTRUCTIONS

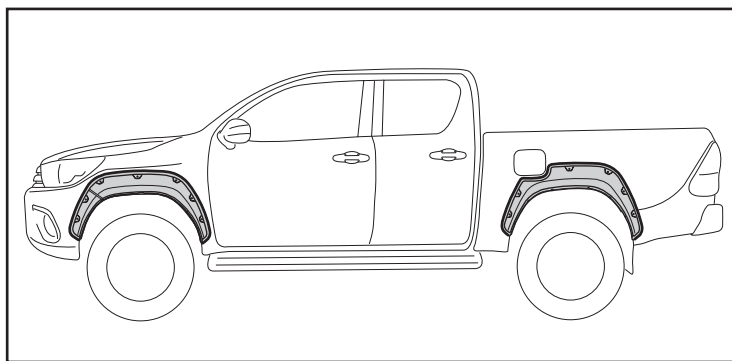

Caution for installation

Read this mounting manual carefully, before your start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.

Product name : FENDER FLARE (Plastic bumper) w bolt, w/o bolt
 Model name : TYT 640A DBC 2015
 Inst. number : L23-0031

Component parts

W Bolt

Front LH

Front RH

Rear LH

Rear RH

1

2

3

W/O Bolt

Front LH

Front RH

Rear LH

Rear RH


1

2



4

No.	Part name	Q'ty
1.	Body front fender flare LH/RH	1 set
2.	Body rear fender flare LH/RH	1 set
3.	Screw	6 pcs.
4.	Clip	6 pcs.

Tools used

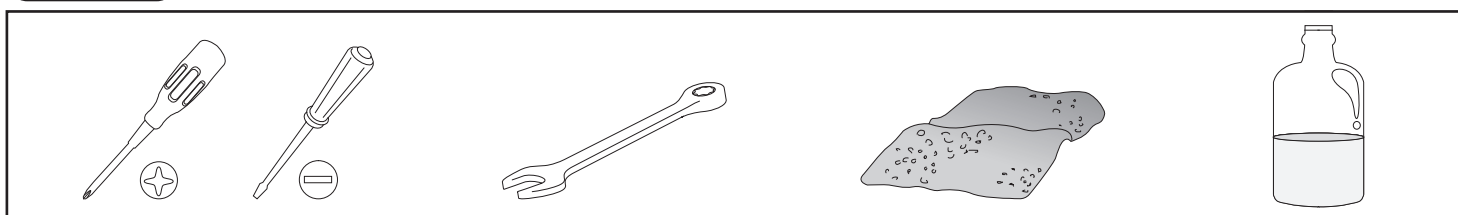

Instruction procedure

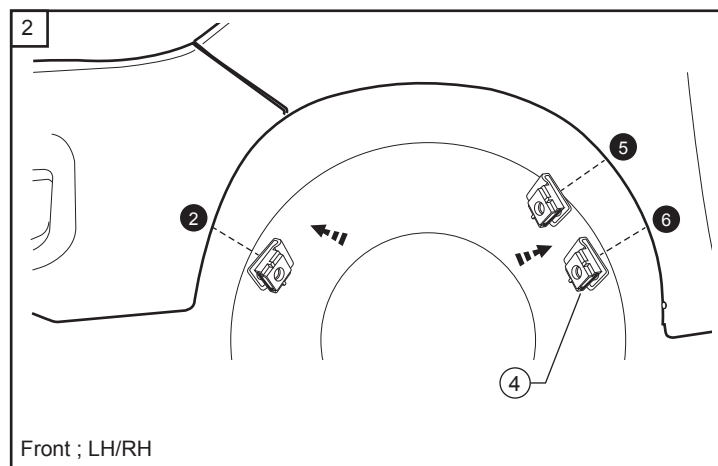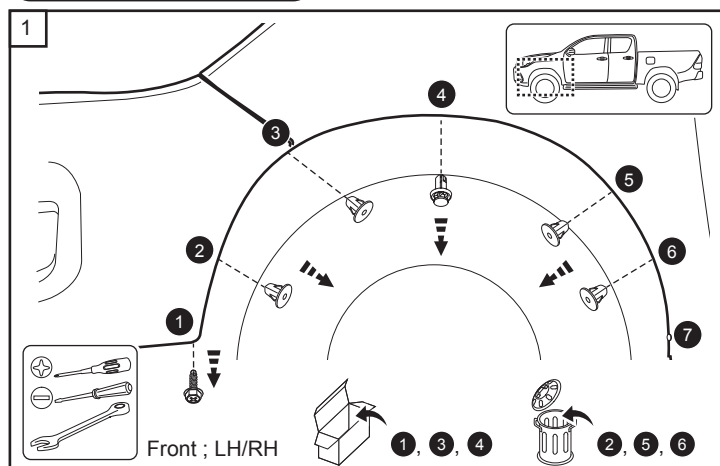

FENDER FLARE INSTALLATION INSTRUCTIONS

