


STYLISH BAR INSTALLATION INSTRUCTIONS

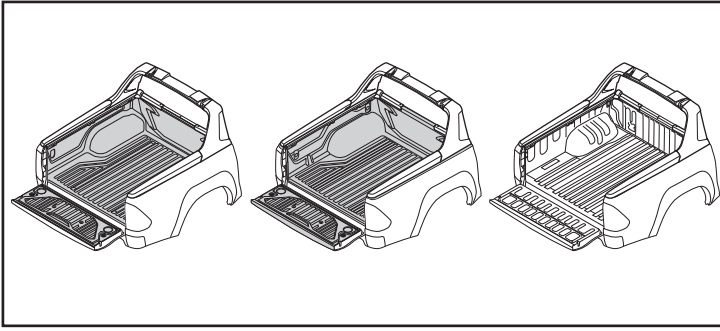

Caution for installation


Read this mounting manual carefully, before your start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.

Product name : STYLISH BAR with LINER U/R /
with LINER O/R / without LINER
Model name : TYT REVO 640A DBC 2016
Inst. number : L23-0037


Component parts

Installation time : 30 minutes

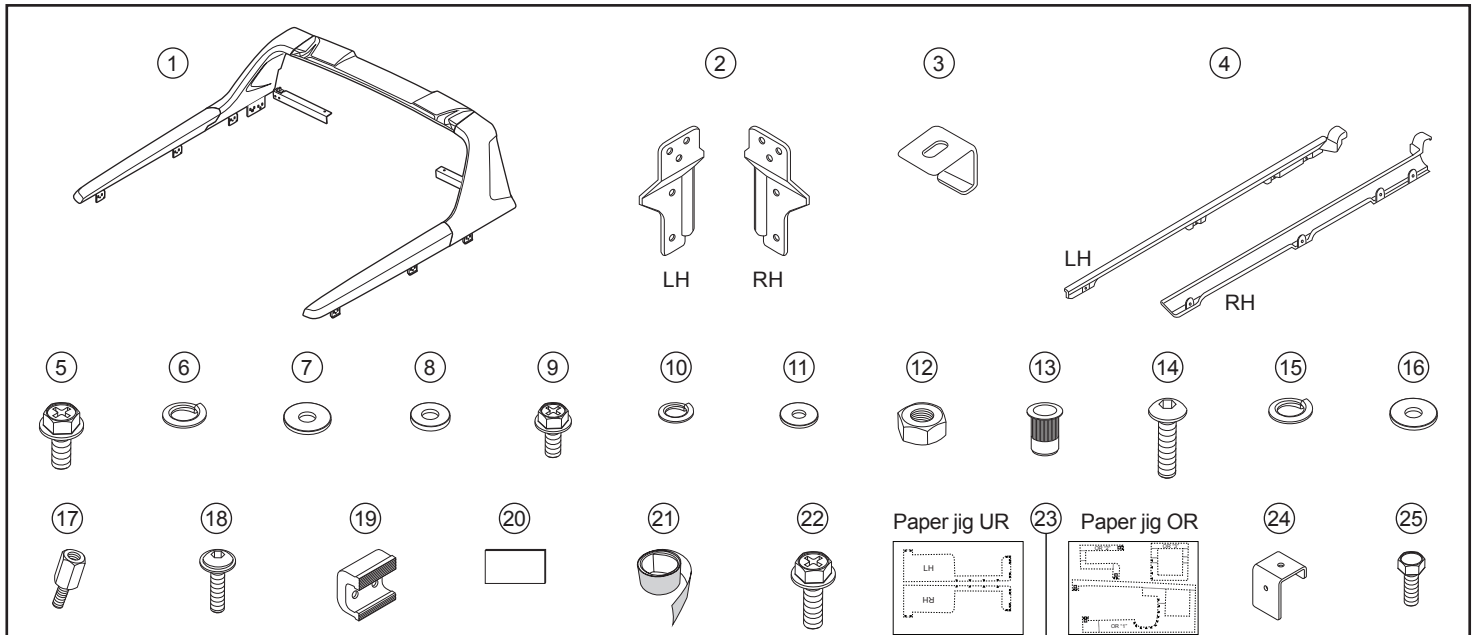

No.	Part name	Q'ty	No.	Part name	Q'ty
1.	Stylish bar set	1 set	14.	Round socket bolt M8x1.25 L40 mm. (White)	16 pcs.
2.	Bracket side 02 LH/RH	2 pcs.	15.	Spring washer M8 OD15 (White)	16 pcs.
3.	Plate clamp lock 01	2 pcs.	16.	Plain washer M8 OD18 (White)	16 pcs.
4.	Cover side LH/RH	2 pcs.	17.	Super nut M6 L25 mm. (Black)	8 pcs.
5.	Hex bolt M8x1.25 L20 mm. (Black)	6 pcs.	18.	Truss head screw M6x1 L15 mm. (Black)	8 pcs.
6.	Spring washer M8 OD15 (Black)	12 pcs.	19.	Clamp lock L60 mm.	8 pcs.
7.	Plain washer M8 OD23 (Black)	6 pcs.	20.	HI protective flim tape 30x50 mm.	10 pcs.
8.	Plain washer M8 OD18 T3 mm. (Black)	6 pcs.	21.	Protective tape	1 pc.
9.	Flange bolt M6x1 (Black)	2 pcs.	22.	Flange bolt M8x1.25 L25 mm.	4 pcs.
10.	Spring washer M6x1 OD11.5 (Black)	2 pcs.	23.	Paper jig (UR / OR)	1 set
11.	Plain washer M6 OD19 (Black)	2 pcs.	24.	Tool support rivet nut M6 (common UR / OR)	1 pc.
12.	Hex nut M8x1.25 (Black)	2 pcs.	25.	Hex bolt M6x25L	2 pcs.
13.	Rivet nut M8x1.25 (White)	2 pcs.			



Tools used

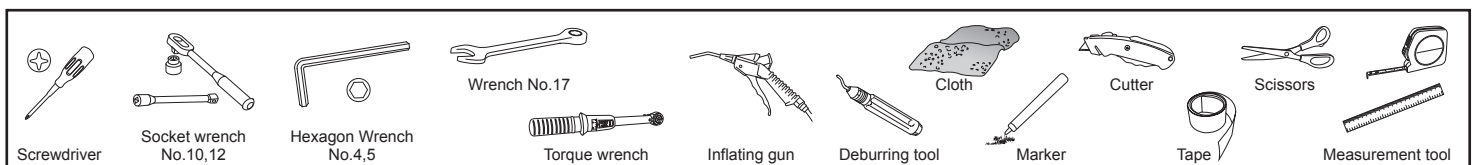


STYLISH BAR INSTALLATION INSTRUCTIONS

Instruction procedure with bed liner (*Install the same in Liner U/R and Liner O/R versions.*)


1 Liner U/R

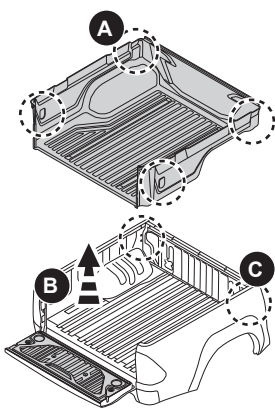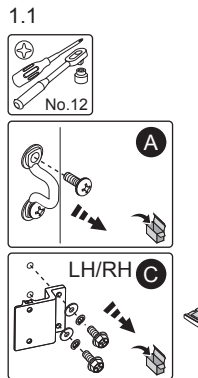



1.2 RH/LH is symmetry. (The figure show RH)

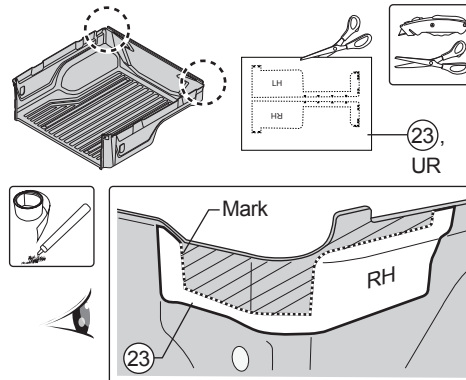


1.3 RH/LH is symmetry. (The figure show RH)

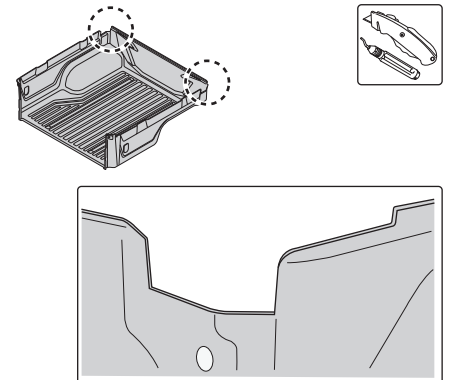


Liner O/R

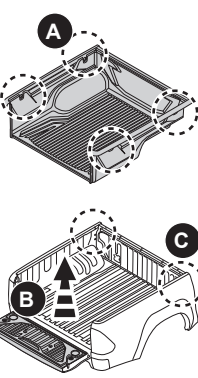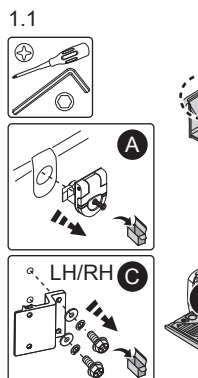




1.2 RH/LH is symmetry. (The figure show RH)

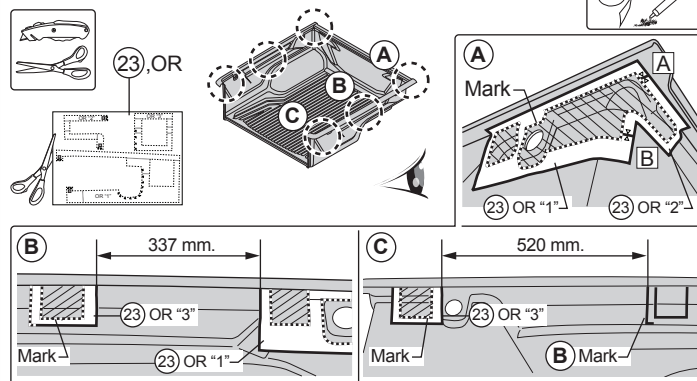


1.3 RH/LH is symmetry. (The figure show RH)

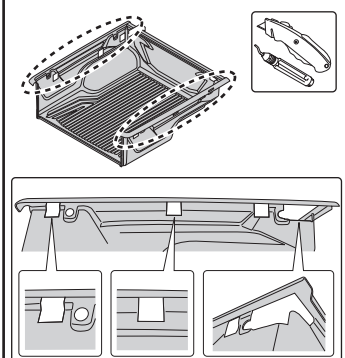


2 Install the same in Liner U/R and Liner O/R versions.

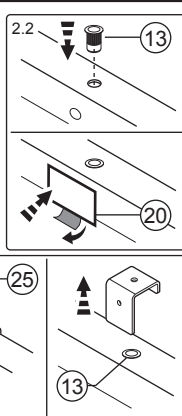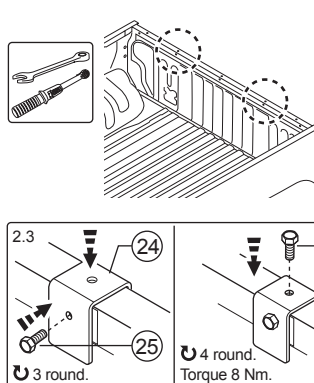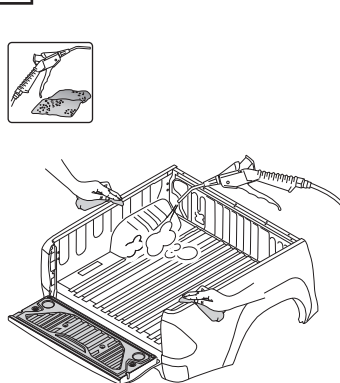


3 Install the same in Liner U/R and Liner O/R versions.

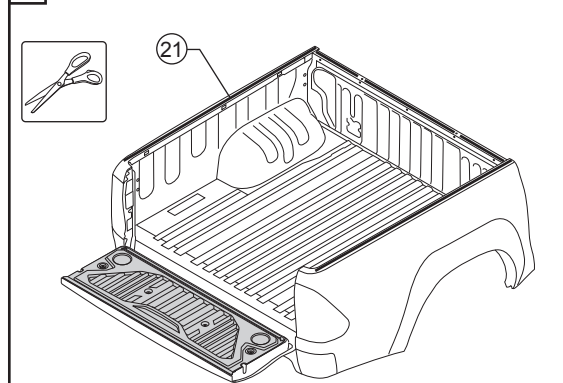

4 Install the same in Liner U/R and Liner O/R versions.

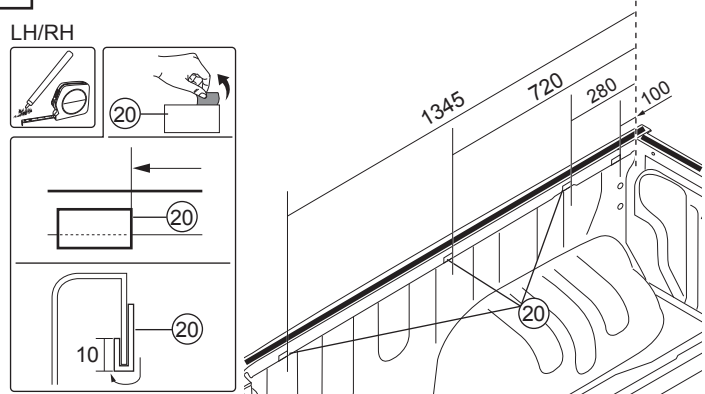


5 Install the same in Liner U/R and Liner O/R versions.

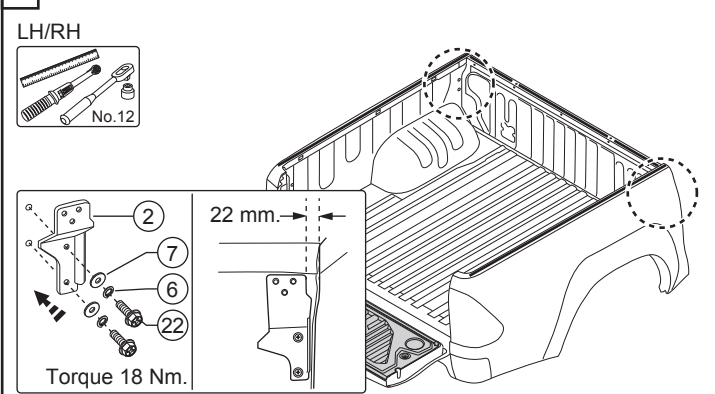



STYLISH BAR INSTALLATION INSTRUCTIONS

Instruction procedure with bed liner (*Install the same in Liner U/R and Liner O/R versions.*)

6 Install the same in Liner U/R and Liner O/R versions.

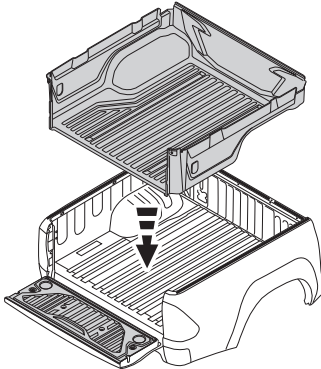


7 **Liner U/R**

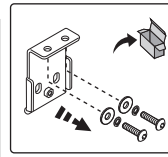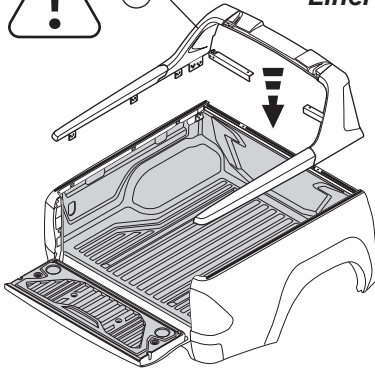

No.5

Liner O/R

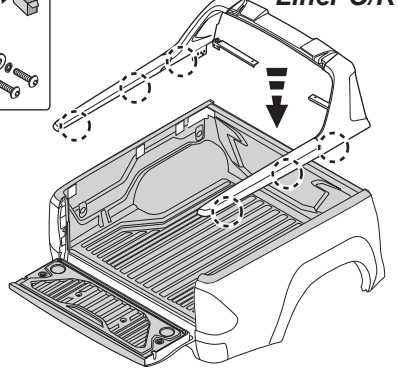


8 Install the same in Liner U/R and Liner O/R versions.

LH/RH



No.12

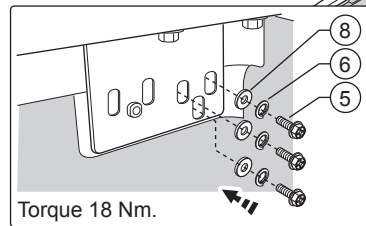


Torque 18 Nm.

9 Install the same in Liner U/R and Liner O/R versions.


LH/RH



No.10,12

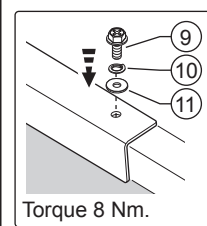

Torque 8 Nm.

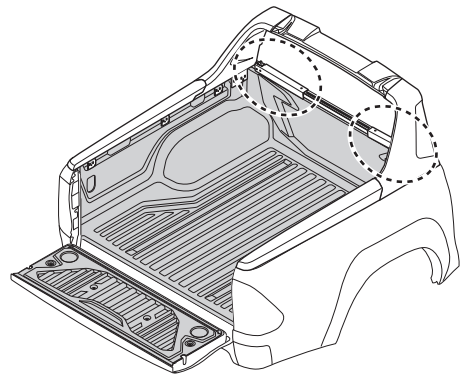


10 Install the same in Liner U/R and Liner O/R versions.


LH/RH



No.12

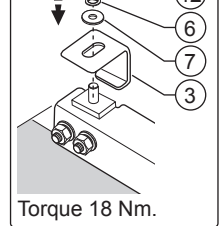

Torque 18 Nm.

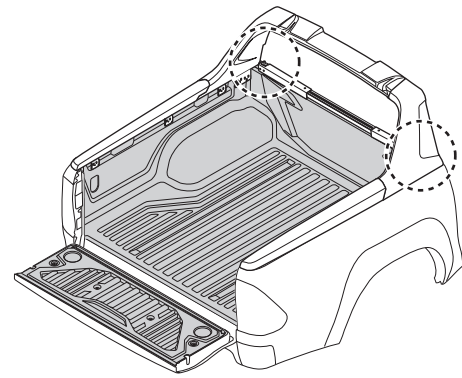


11 Install the same in Liner U/R and Liner O/R versions.


LH/RH



No.5

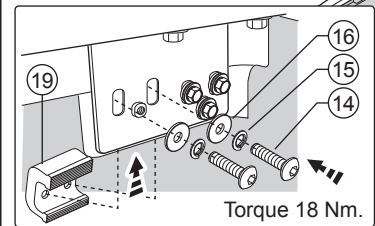

Torque 18 Nm.

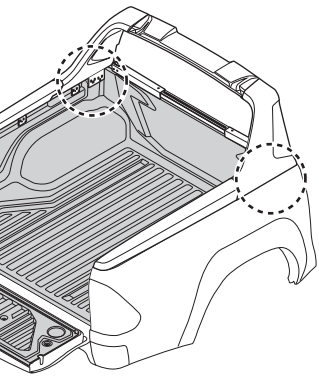


12 **Liner U/R**


LH/RH



No.5

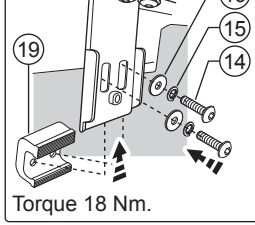

Torque 18 Nm.



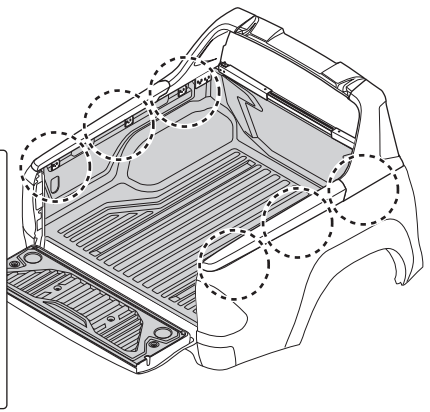


12 **Liner O/R**



LH/RH



No.5

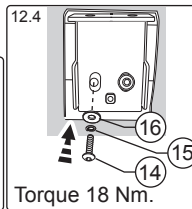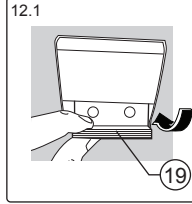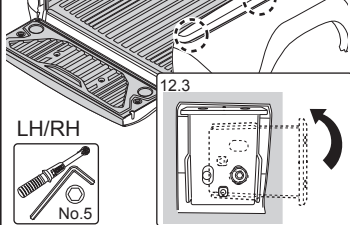

Torque 18 Nm.

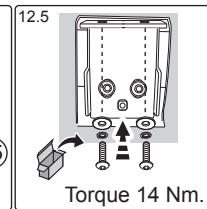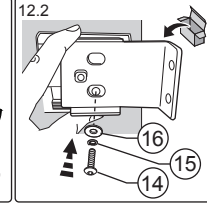



Torque 14 Nm.

STYLISH BAR INSTALLATION INSTRUCTIONS

Instruction procedure with bed liner (*Install the same in Liner U/R and Liner O/R versions.*)



13 Install the same in Liner U/R and Liner O/R versions.

LH/RH

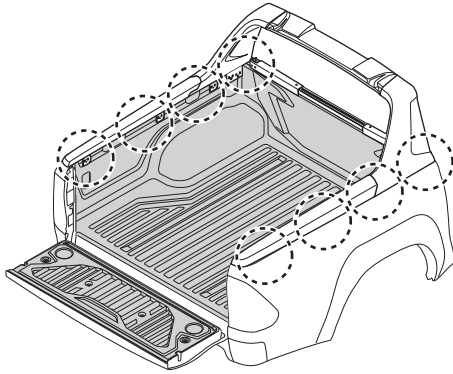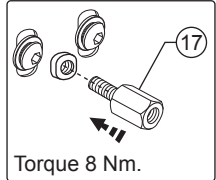





14 Install the same in Liner U/R and Liner O/R versions.

LH/RH

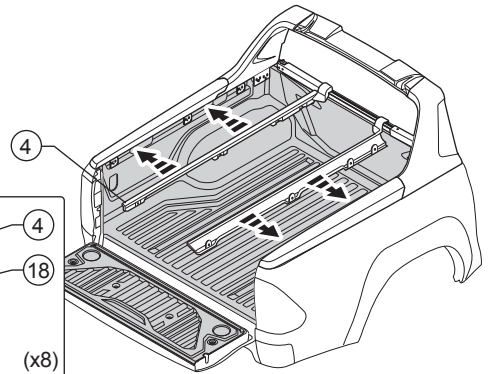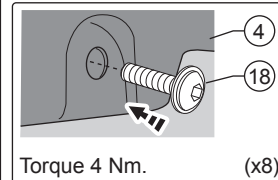



15 **Liner U/R**

Liner O/R

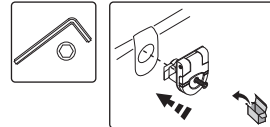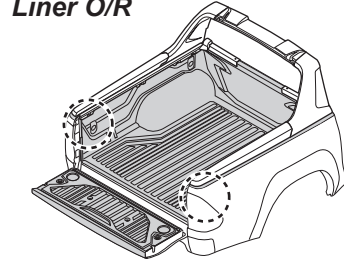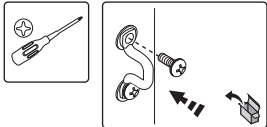
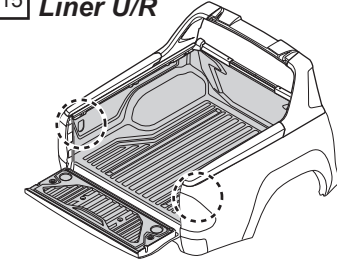


16 Install the same in Liner U/R and Liner O/R versions.

LH/RH

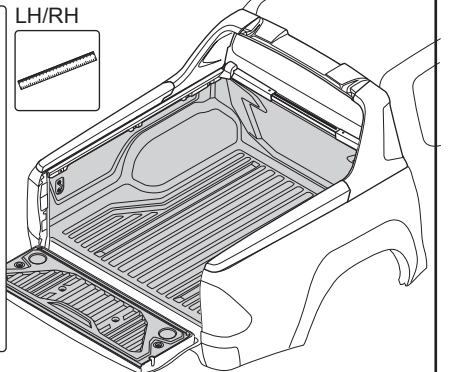
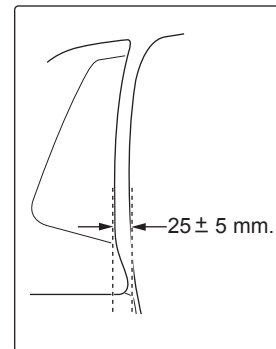


Instruction procedure with out bed liner

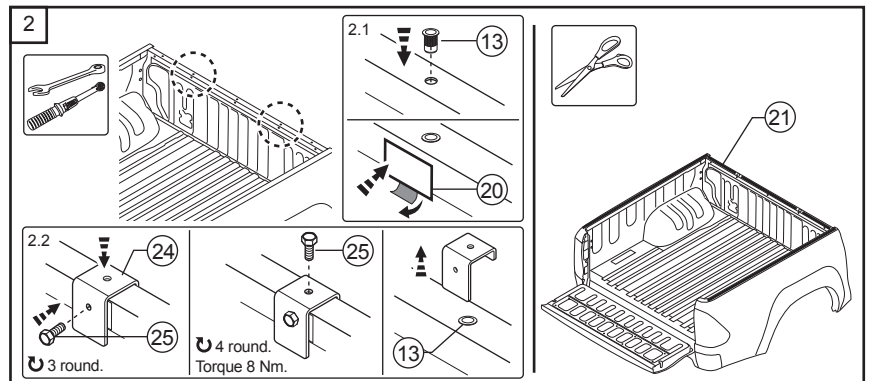
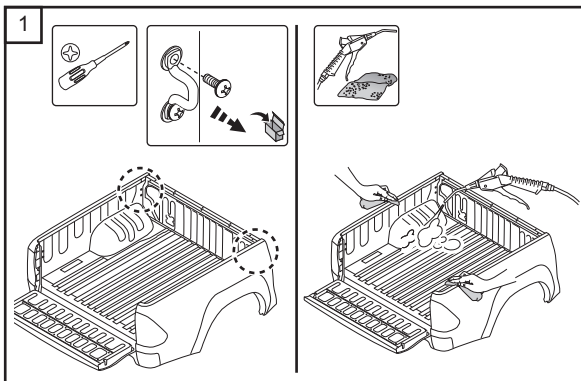


3 Install the same in Liner U/R and Liner O/R versions.

LH/RH

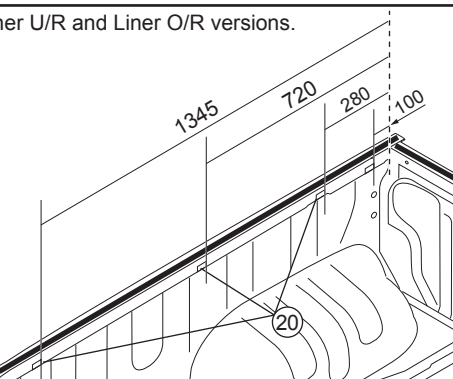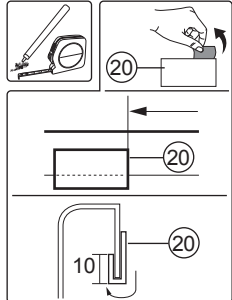


4 LH/RH

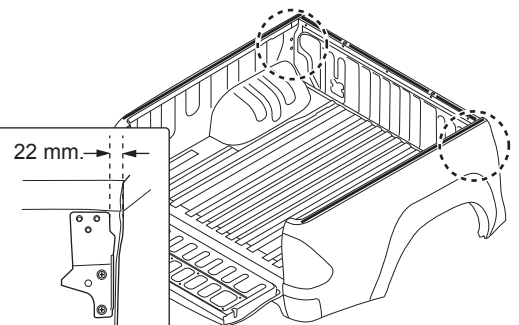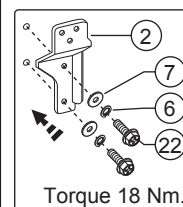


STYLISH BAR INSTALLATION INSTRUCTIONS

Instruction procedure with out bed liner

5 LH/RH

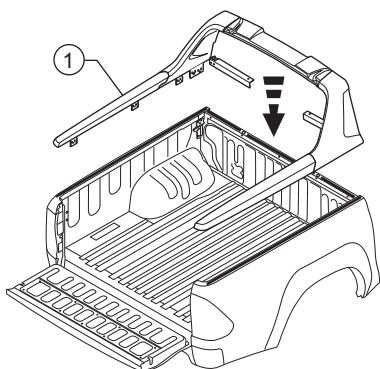


6 LH/RH

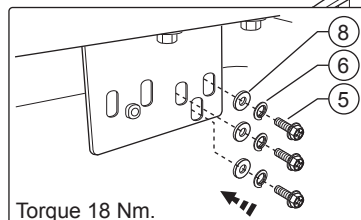


Torque 18 Nm.

7 LH/RH

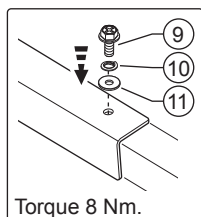


Torque 8 Nm.

8 LH/RH

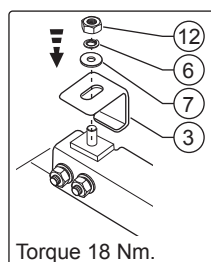


Torque 18 Nm.

9 LH/RH

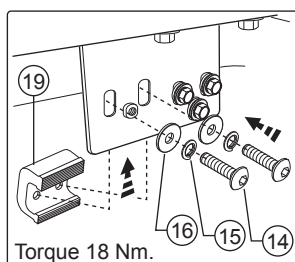


Torque 18 Nm.

10 LH/RH

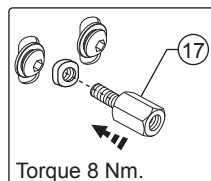

Torque 8 Nm.


11 LH/RH

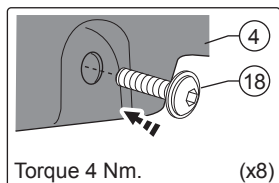

Torque 4 Nm.

(x8)

12 LH/RH

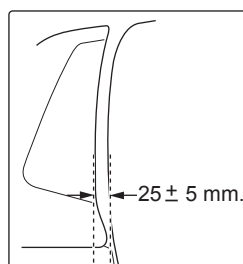

25 ± 5 mm.

